

Component Locations

[G62 – Engine Coolant Temperature \(ECT\) sensor \(2.8 ltr. engine\)](#)

[G62 – Engine Coolant Temperature \(ECT\) sensor \(1.8 ltr. engine\)](#)

[G62 – Engine Coolant Temperature \(ECT\) Sensor \(2.0 ltr. tdi engine\)](#)