



32 Ground Connection

- on lower A-pillar, left
- to left of fuse/relay panel