



**43 Ground Connection**

- below instrument panel, on lower A-pillar, right side