



### Relay arrangements on eightfold (eight position) auxiliary relay panel behind relay panel

#### Relay locations on relay panel

- |   |  |
|---|--|
| 1 | free   |
| 2 | free   |
| 3 | Coolant Fan Control (FC) Relay 80 W (373)        |
| 4 | free   |
| 5 | First Speed Coolant Fan Control (FC) Relay (373) |
| 6 | Coolant Fan Control (FC) Relay (373)             |
| 7 | Relay for ABS with ESP (373)                     |
| 8 | Coolant Fan Control (FC) Relay (370)             |

**Fuses at eightfold auxiliary relay panel**

- ◆ ABS Hydraulic Pump Fuse 30 A
- ◆ Power Window Fuse 30 A
- ◆ Coolant Fan Fuse 30 A, 40 A, 60 A
- ◆ Coolant Fan Fuse 5 A
- ◆ ABS Hydraulic Pump Fuse 30 A, 50 A
- ◆ Power Seat Circuit Breaker - Passenger's Seat 30 A
- ◆ Power Seat Circuit Breaker - Driver's Seat 30 A
- ◆ Alarm System with Anti-Theft warning system -Telematics 30 A
- ◆ Alarm System with Anti-Theft warning system 15 A