

- Generator (GEN) (1.8 ltr. engine)
 - in engine compartment, front, to left of cylinder head