



G191 **Sender for outlet temperature, center**

- on bottom of heater box, center, above central tunnel