



**G192      Sender for outlet temperature, floor outlet**

- in footwell duct, on bottom of heater box, driver's side