



G6 Fuel Pump (FP)

- in fuel tank; accessible through luggage compartment, right front
- integral with –G–