

Intake Air Temperature (IAT) sensor (1.8 ltr. engine)

- in intake manifold, behind throttle body
- shown with coolant reservoir removed