



J433 Locking Relay for Starter (anti-theft immobilizer)

- location 12 on thirteenfold auxiliary relay panel