Passat

BentleyPublishe

Checking radio, only for cars with green illuminated instrument cluster

Contents

-	Radio inoperative	9/2
-	Poor/intermittent FM reception and interference	9/2
-	One or more speakers inoperative	9/3
-	LED for anti-theft-coding does not flash in switched off position	9/4
-	Checking roof antenna	9/5
-	Tape sound reproduction is dull or not clear	9/6
-	Autoreverse switches over constantly or to early	9/6

Required for troubleshooting:

- ♦ Multimeter Fluke 83
- Connector test kit VW 1594
- Valid wiring diagram
- ♦ Test antenna
- Operating instructions for the appropriate radio

CAUTION!

DO NOT damage, enlarge or bend connector terminals or cavities by forcing probes into them when performing electrical checks. Always use connector test kit VW 1594 to make the necessary electrical connections.

Radio inoperative

Test condition:

♦ Fuse S237 OK


Check battery voltage - Remove radio from instrument panel, \Rightarrow Repair Group 91 - Remove 8-pin connector (power supply), black, from radio - Set measuring range selector on Fluke 83 to 20 V - Connect black test lead to 8-pin connector, terminal 8 - Connect red test lead to 8-pin connector, terminal 7 Voltage NOT OK Voltage OK Check wiring to radio according to wiring diagram Check fuse (back side of radio) - Remove radio fuse - Set measuring range selector on Fluke 83 to 🖊 / - Check fuse continuity Sound signal NO sound signal Replace radio Replace radio fuse

END

Poor/intermittent FM reception and interference

Test conditions:

- Press FM button
- Select a strong (local) radio station
- Telescoping antenna fully extended, roof antenna mounted securely
- Reception conditions OK (DO NOT test inside)

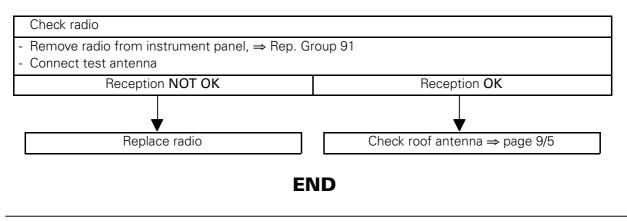


Edition 10/97 USA.5062.02.21

BentleyPublis

One or more speakers inoperative

Test conditions:

- Speaker balance and fader settings in center position
- Connector for speakers on radio OK

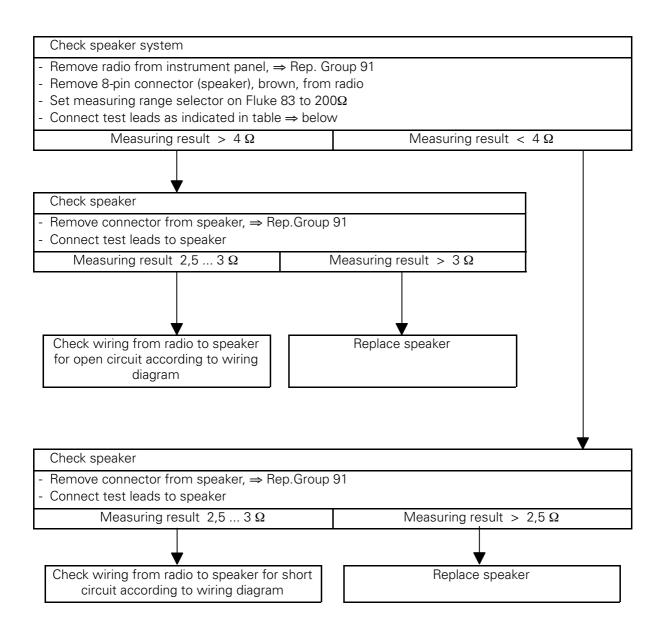

Test connections at 8-pin connector (speaker), brown

Test lead	Speaker left front	Speaker right front	Speaker left rear	Speaker right rear
red	terminal 5	terminal 3	terminal 7	terminal 1
black	terminal 6	terminal 4	terminal 8	terminal 2

END


LED for anti-theft-coding does not flash in switched off position

Check coding of radio				
 Turn radio ON Press 'SEEK" and 'SCAN" buttons simultaneously 				
Display shows 'SAFE", then "1000"	Display shows 'SAFE", then '1000" Display shows 'CODE", then '1000"			
Replace radio				
Input security code				
 Input security code using the station preset buttons Press 'SEEK" and 'SCAN" buttons simultaneously until display shows 'SAFE", and then a frequency Remove ignition key or turn off the radio 				
LED flashes	LED DOES NOT flash			
Radio OK	Replace Radio			

END



Checking roof antenna

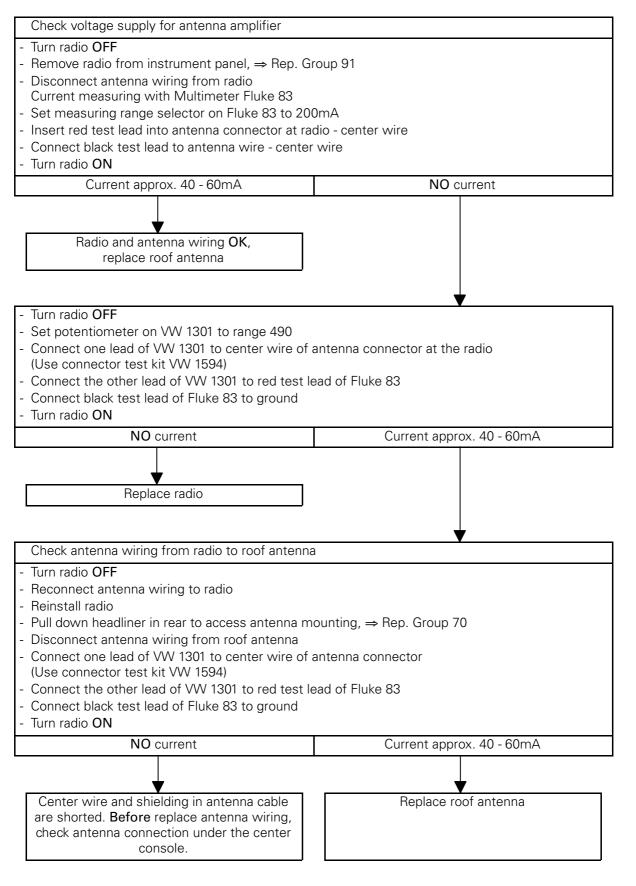


BentleyPublish

Tape sound is dull or not clear

Test condition:

♦ Radio reproduction **OK**

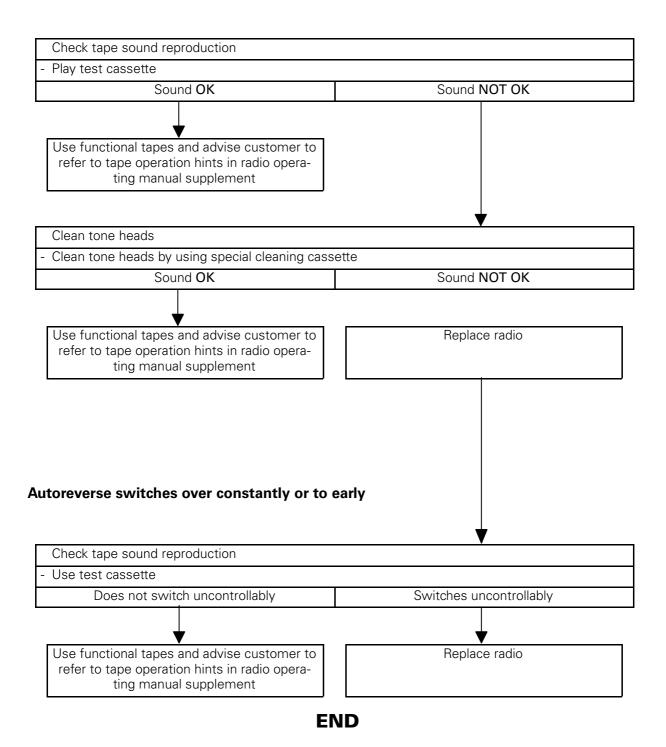

B Bentley Publishers

Edition 10/97