


## Washer Nozzle Heaters,

from September 1997


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

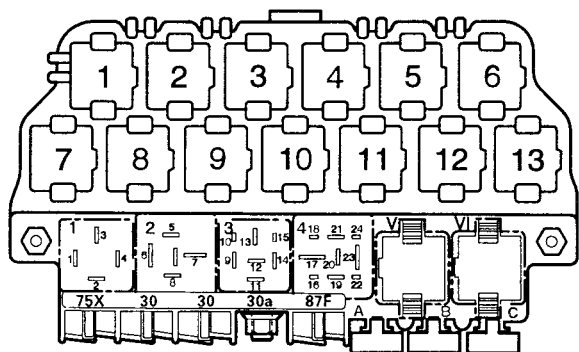

97-20676

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

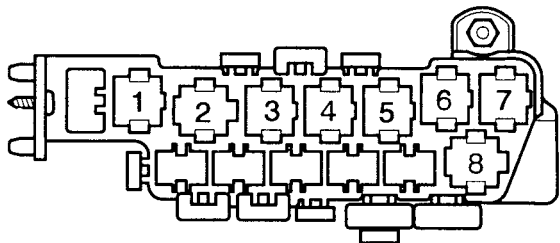



97-20515

Relay location on the eightfold auxiliary relay panel, behind relay panel:

**Fuse colors**

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7,5 A – brown
- 5 A – beige

Note: Number in parentheses indicates production control number stamped on relay housing.

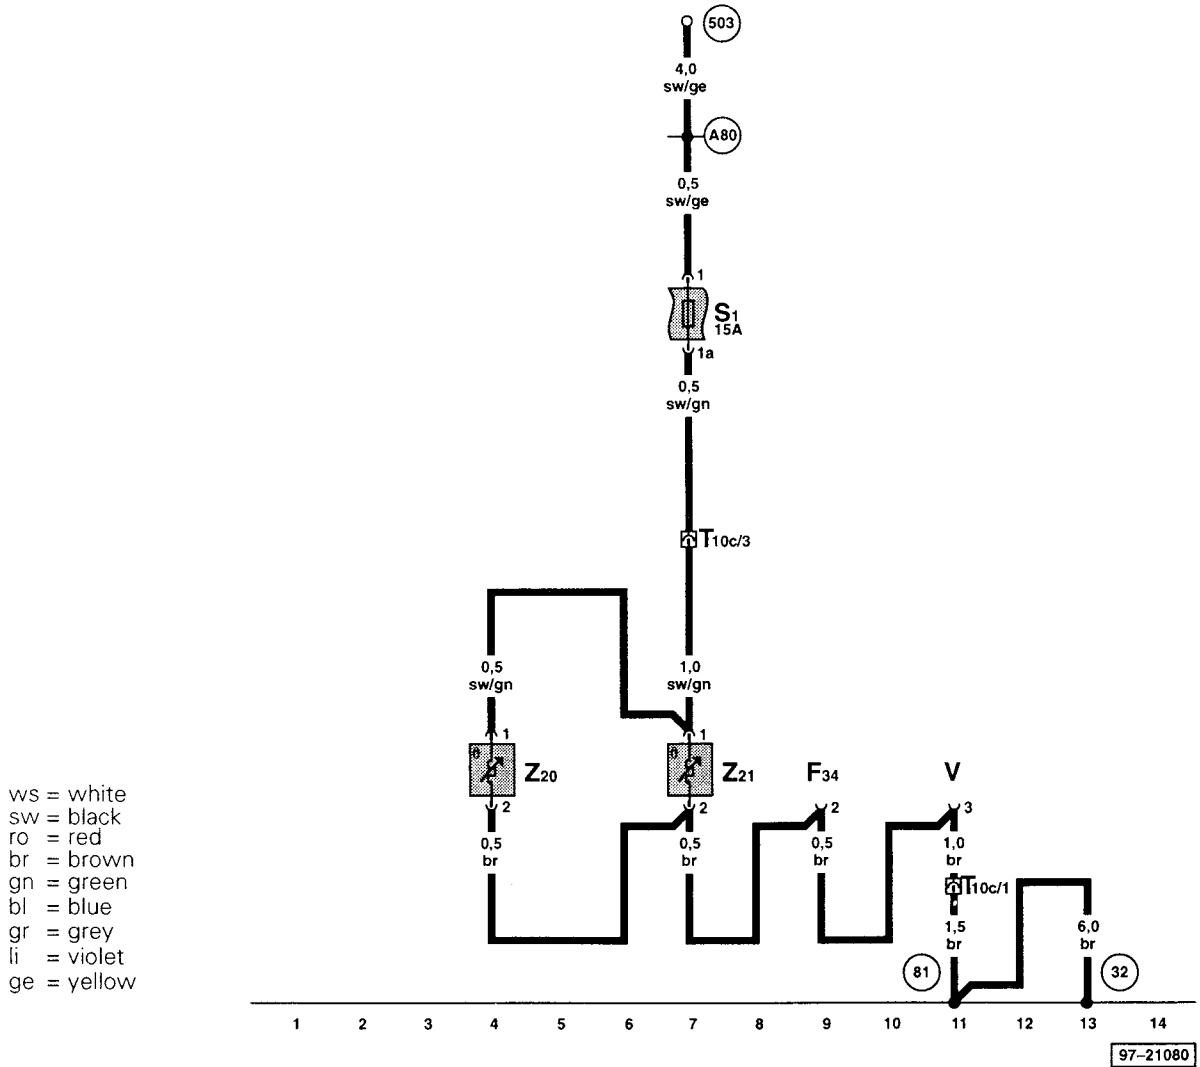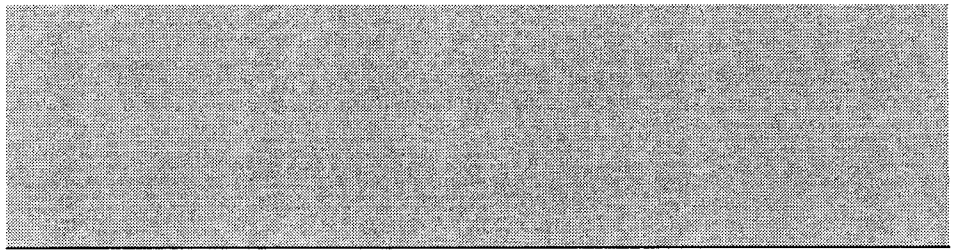

- F34 - Brake Fluid Level Warning Switch
- S1 - Fuse 1 in fuse holder
- T10c - 10-Pin Connector, violet, connector station A-pillar, left
- V - Windshield Wiper Motor
- Z20 - Left Washer Nozzle Heater
- Z21 - Right Washer Nozzle Heater
- (32) - Ground connection, behind instrument panel, left
- (81) - Ground connection -1-, in instrument panel wiring harness
- (503) - Screw Connection (75x), on relay panel
- (A80) - Connector -1- (X), in instrument panel wiring harness