



Radio System

from August 1999

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

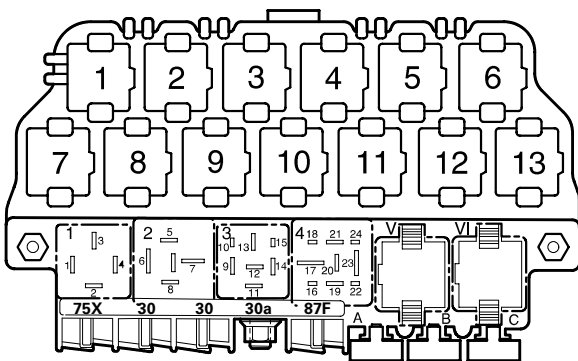


97-20676

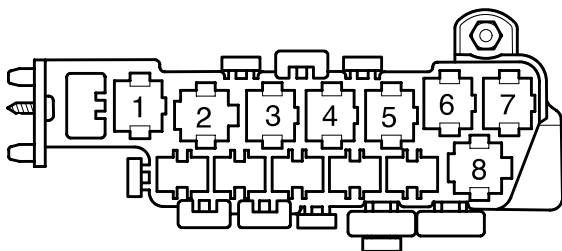

97-20515

Fuse colors


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

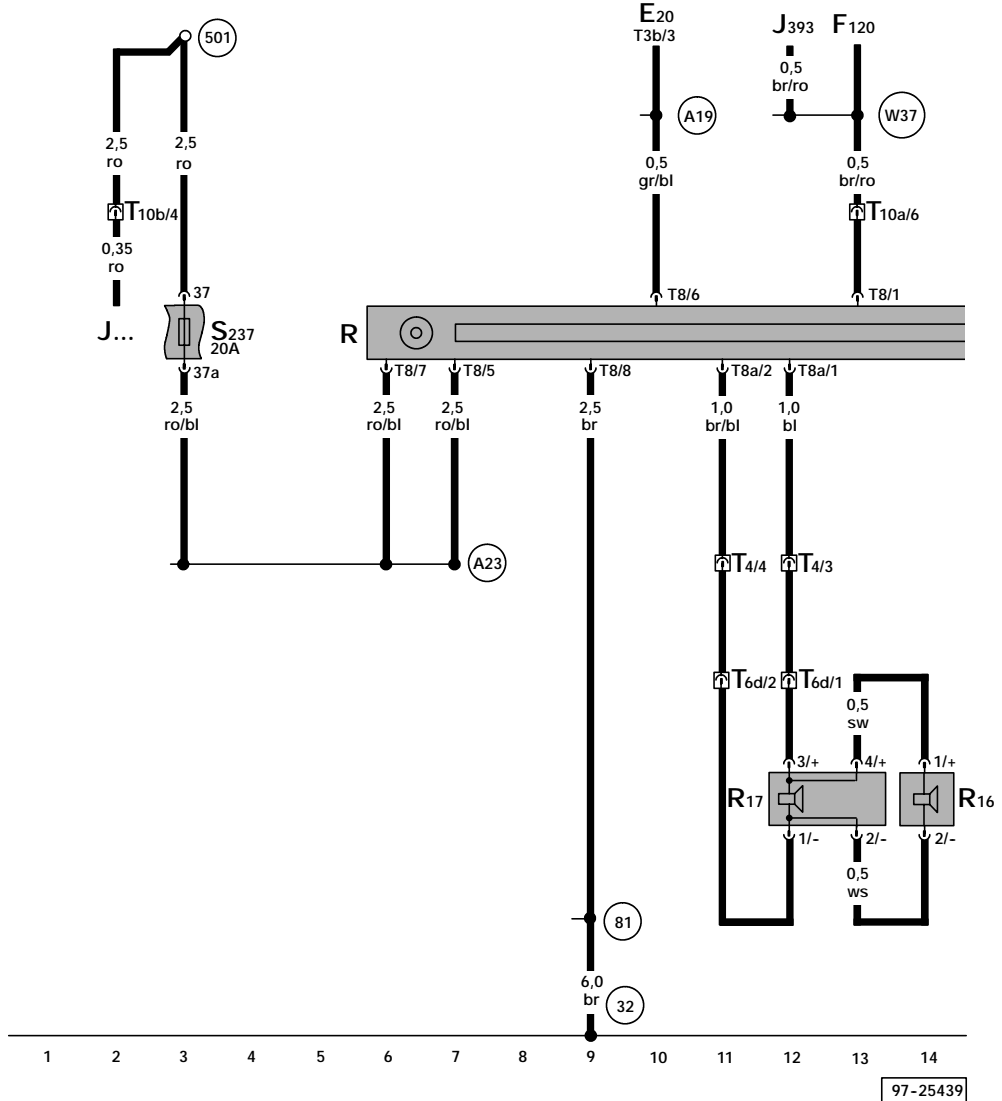

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E20 - Instrument Panel Light Dimmer Switch
- F120 - Hood Alarm Switch
- J... - Engine Control Module (ECM)
- J393 - Central control module for comfort system
- R - Radio
- R16 - Treble speaker, right rear, in right rear door
- R17 - Bass speaker, right rear, in right rear door
- S237 - Fuse 37 in fuse holder
- T3b - 3-Pin Connector
- T4 - 10-Pin Connector, black, connector station A-pillar, right
- T6d - 6-Pin Connector, red, on B-pillar, right
- T8 - 8-Pin Connector, black, on radio
- T8a - 8-Pin Connector, brown, on radio
- T10a - 10-Pin Connector, brown, connector station A-pillar, left


- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- (32) - Ground connection, behind instrument panel, left
- (81) - Ground connection -1-, in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A23) - wire connection (30al), in instrument panel wiring harness
- (W37) - Connection (DWA - alarm system), in floor wiring harness

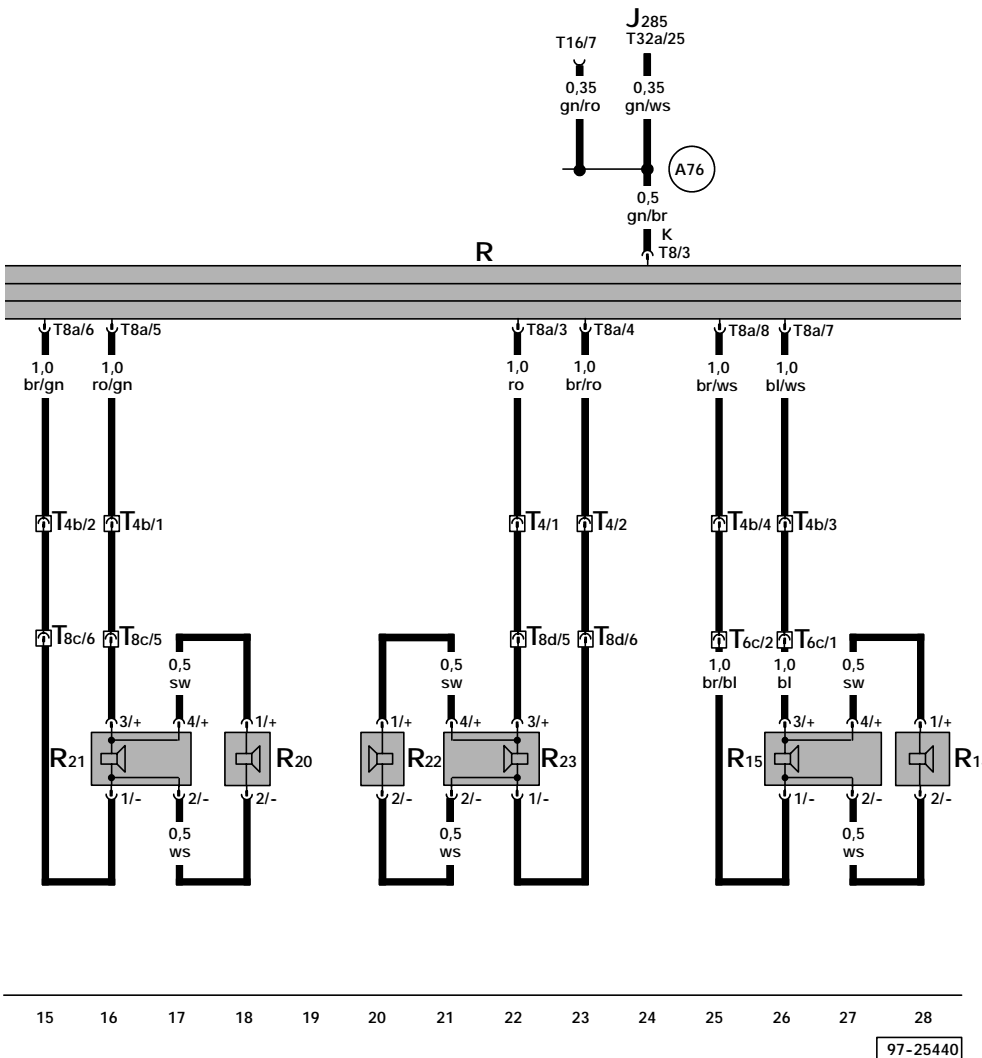

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = violet
ge = yellow

- J285 - Control module with indicator unit in instrument panel insert
- R - Radio
- R14 - Treble speaker, left rear, in left rear door
- R15 - Bass speaker, left rear, in left rear door
- R20 - Treble speaker, left front, in driver's door
- R21 - Bass speaker, left front, in driver's door
- R22 - Treble speaker, right front, in passenger's door
- R23 - Bass speaker, right front, in passenger's door
- T4 - 10-Pin Connector, black, connector station A-pillar, right
- T4b - 10-Pin Connector, black, connector station A-pillar, left
- T6c - 6-Pin Connector, red, on B-pillar, left
- T8 - 8-Pin Connector, black, on radio
- T8a - 8-Pin Connector, brown, on radio

- T8c - 8-Pin Connector, black, connector station A-pillar, left
- T8d - 8-Pin Connector, black, connector station A-pillar, right
- T16 - 16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
- T32a - 32-Pin Connector, blue, on instrument cluster
- A76 - Connector (K-diagnosis wire), in instrument panel wiring harness

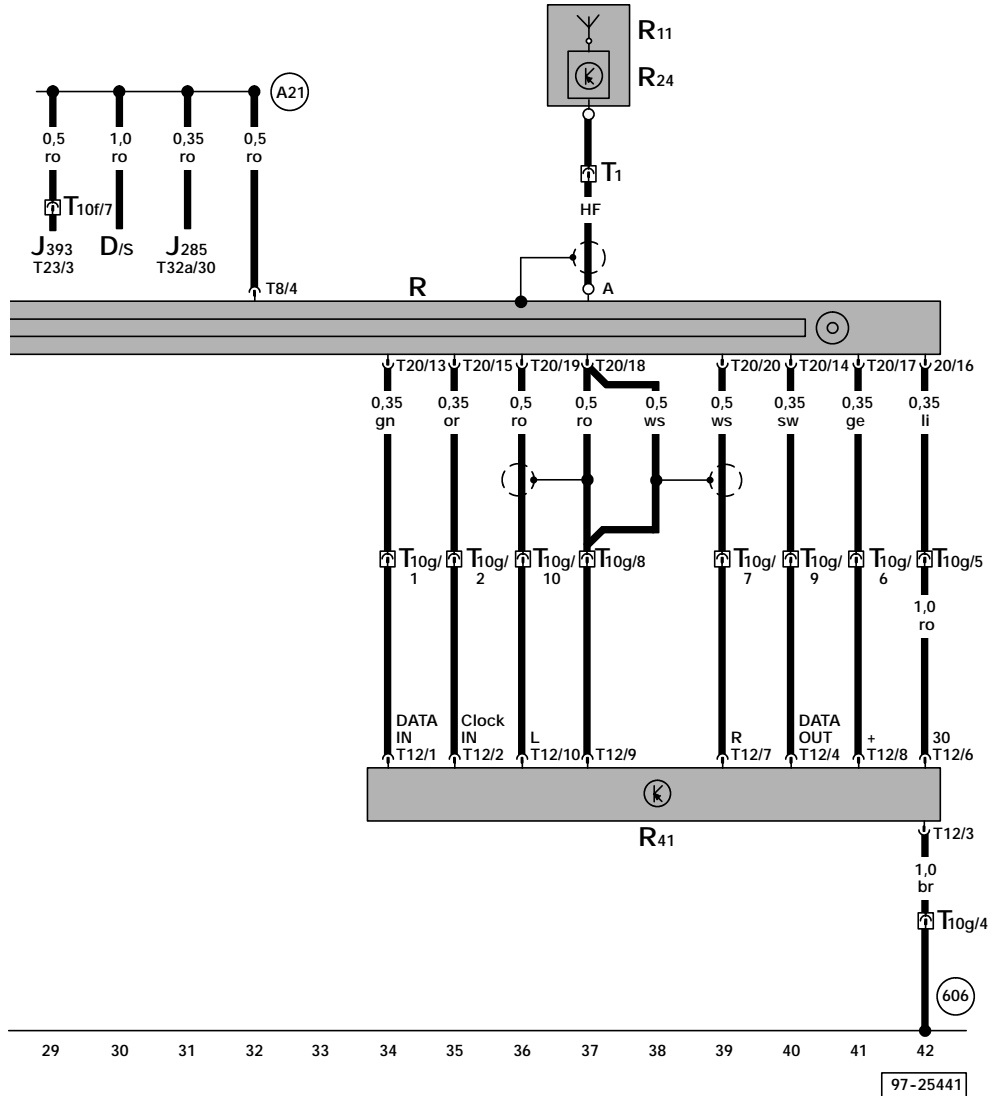

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow
- or = orange

- D - Ignition/Starter Switch
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- R - Radio
- R11 - Antenna
- R24 - Antenna Amplifier
- R41 - CD Changer Unit, in luggage compartment
- T1 - 1-Pin Connector, black, below console
- T8 - 8-Pin Connector, black, on radio
- T12 - 12-Pin Connector, red, on CD Changer Unit
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T10g - 10-Pin Connector, red, connector station A-pillar, left
- T20 - 20-Pin Connector, on radio
- T23 - 23-Pin Connector, on central control module for comfort system
- T32a - 32-Pin Connector, blue, on instrument cluster
- (A21) - wire connection (86s), in instrument panel wiring harness
- (606) - Ground Connection, (under center console at shifter)