

Passat - Standard Equipment

from October 2000



Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations"

Relay location on the thirteen position auxiliary relay panel, above relay panel:


- 5 - Daytime Running Lights Change-over Relay (173)
- 7 - Fog Light Relay (381)
- 12 - Starting Interlock Relay (alarm system) (185)
- 13 - Starting Interlock Relay (clutch system) (53)

Relay panel:

- 1 - Dual Horn Relay (53)
- 2 - Load Reduction Relay (213)
- 4 - Fuel Pump (FP) Relay (372)
- V - Wiper/Washer Intermittent Relay (377)
- VI - Wiper/Washer Intermittent Relay (377)

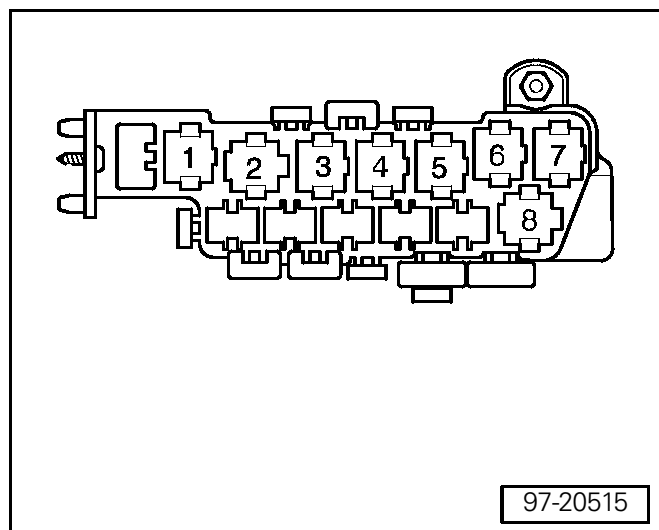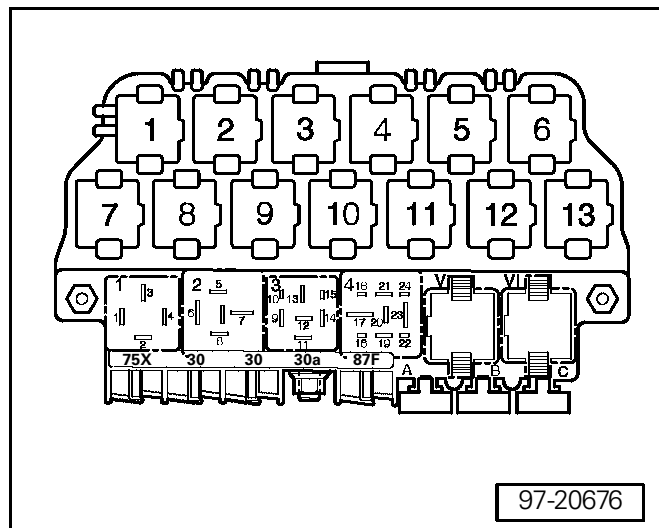

Relay location on the eight position auxiliary relay panel, above relay panel:

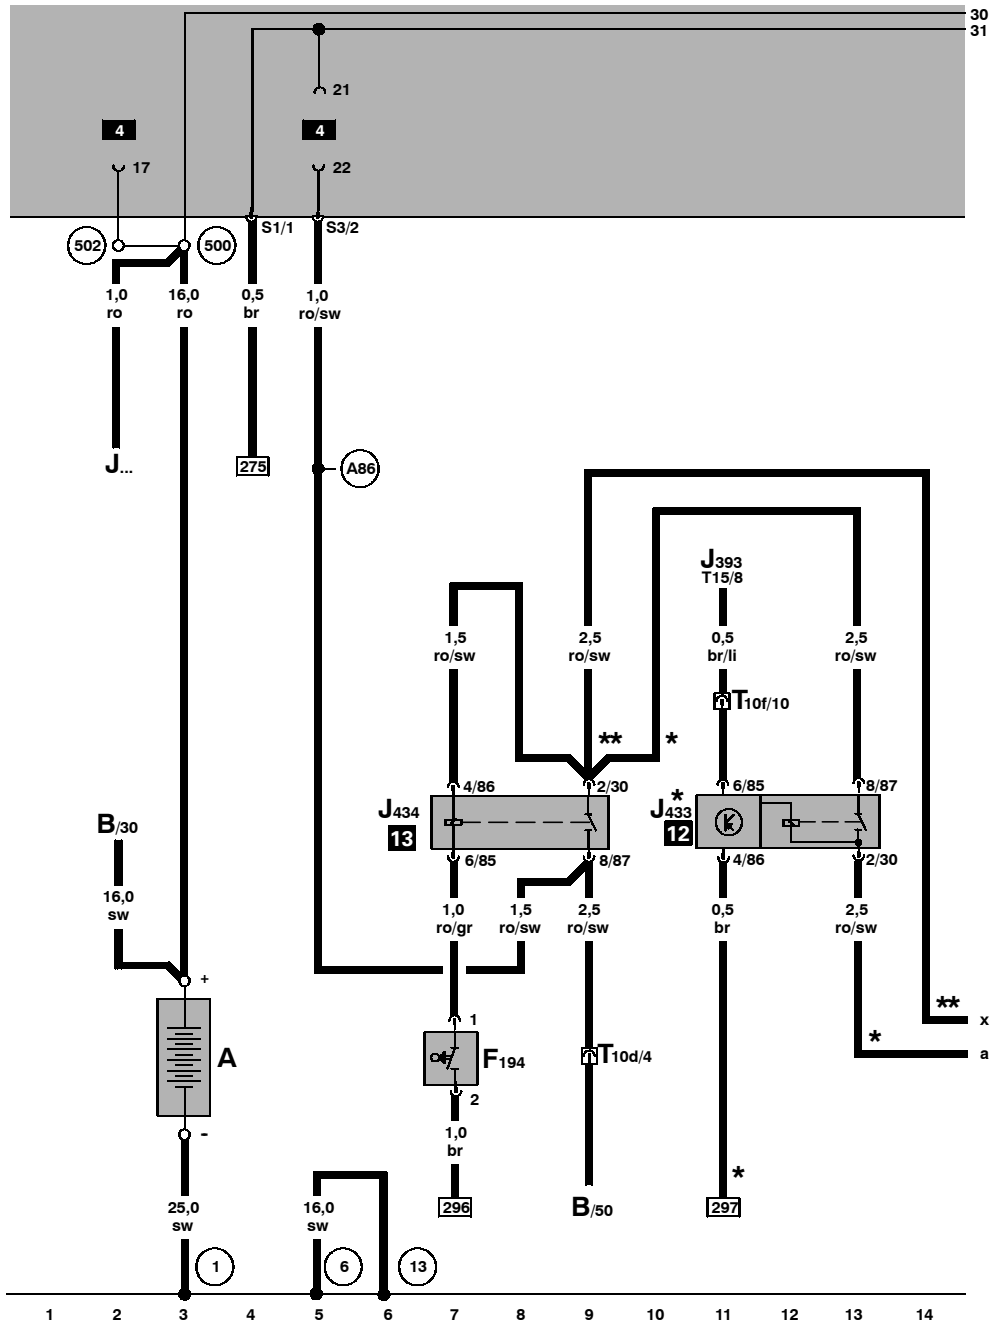


Locking relay for starter, Battery, Starter

- A - Battery
- B - Starter
- F194 - Clutch Pedal Position (CPP) Switch
- J... - Engine control module (ECM)
- J393 - Central control module for comfort system
- J433 - Locking relay for starter (anti - theft immobilizer)
- J434 - Locking relay for starter (clutch pedal switch)
- T10d - 10-Pin Connector, brown, on protective housing for control module, in engine compartment, left
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T15 - 15-Pin Connector, on central control module for comfort system

- 1 - Ground strap, battery to body
- 6 - Ground strap, engine to generator
- 13 - Ground connection, in engine compartment, right
- 500 - Threaded connection -1- (30), on relay plate
- 502 - Threaded connection (30a), on relay plate
- A86 - Connection (50a) in instrument panel wiring harness

- * - through April 2003
- ** - from May 2003

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

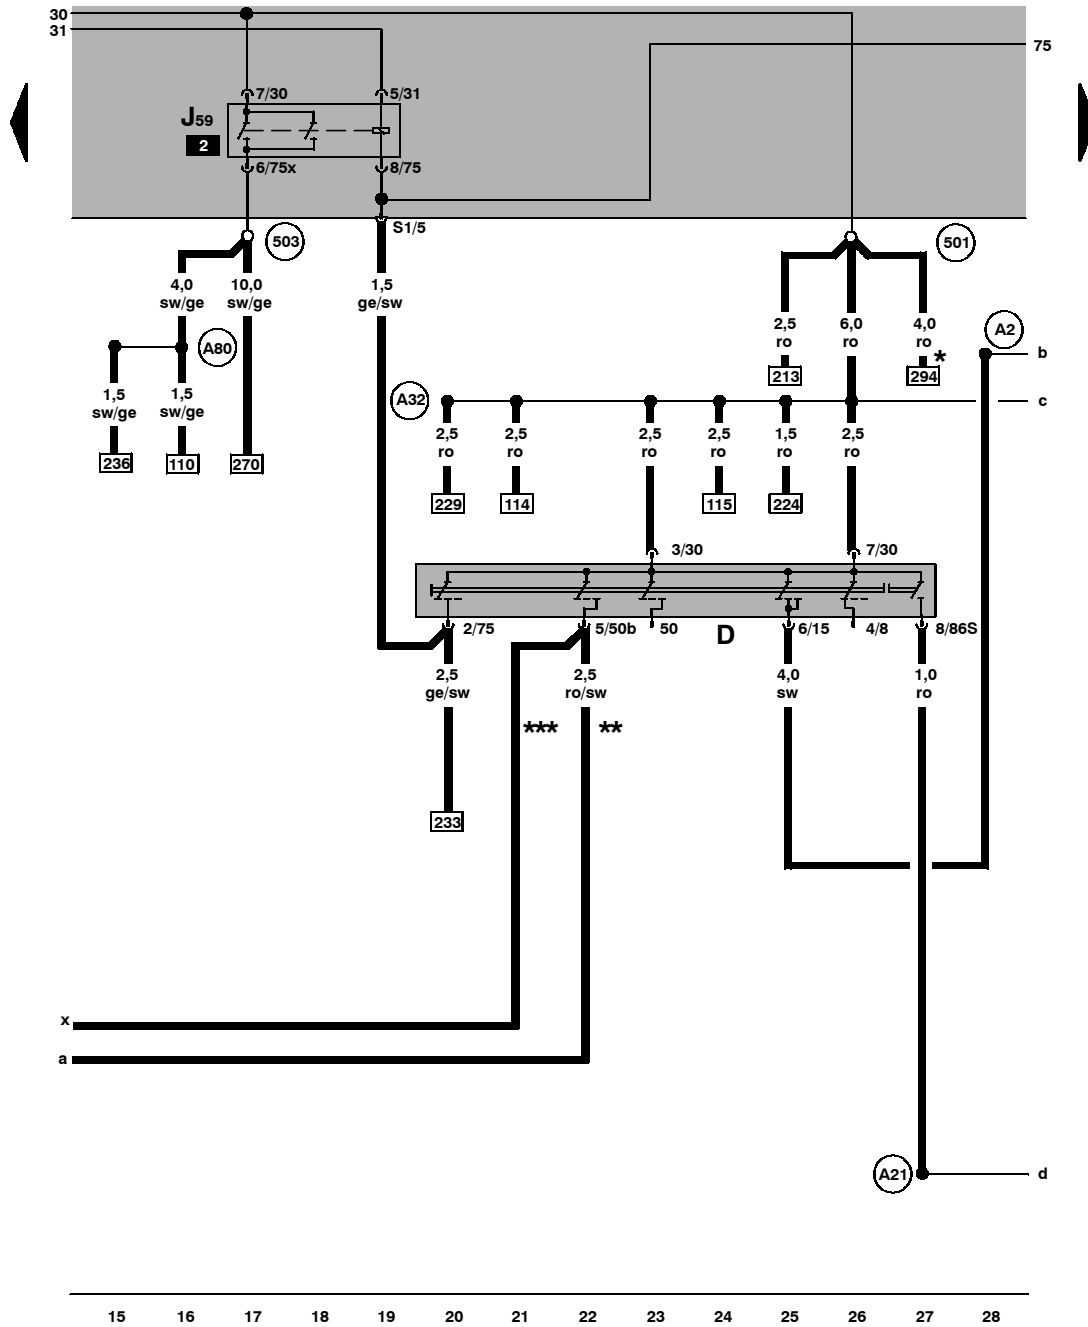

Ignition/Starter Switch

- D - Ignition/Starter Switch
- J59 - Load Reduction Relay

- (501) - Threaded connection -2- (30), on relay plate
- (503) - Bolted connection (75x) (at relay panel)
- (A2) - plus connection (15), in instrument panel wiring harness
- (A21) - wire connection (86s), in instrument panel wiring harness
- (A32) - plus connection (30), in instrument panel wiring harness
- (A80) - Connector -1- (X) in instrument panel wiring harness
- (A32) - plus connection (30), in instrument panel wiring harness


- * - models with headlight washer system only
- ** - through April 2003
- *** - from May 2003

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Instrument cluster, Data Link Connector (DLC)

- J285 - Control module with indicator unit in instrument panel insert
- S5 - Fuse
- S12 - Fuse
- S13 - Fuse
- S15 - Fuse
- S231 - Fuse in fuse holder
- S239 - Fuse in fuse holder
- S240 - Fuse in fuse holder
- T16 - 16-Pin Connector, black, Data Link Connector(DLC)
- T32a - 32-Pin Connector, blue, on instrument cluster

- (A1) - plus connection (30a), in instrument panel wiring harness
- (A2) - plus connection (15), in instrument panel wiring harness
- (A21) - wire connection (86s), in instrument panel wiring harness
- (A32) - plus connection (30), in instrument panel wiring harness
- (A74) - Connector (15a - fuse 5), in instrument panel wiring harness
- (A76) - Connector (K-diagnosis wire), in instrument panel wiring harness

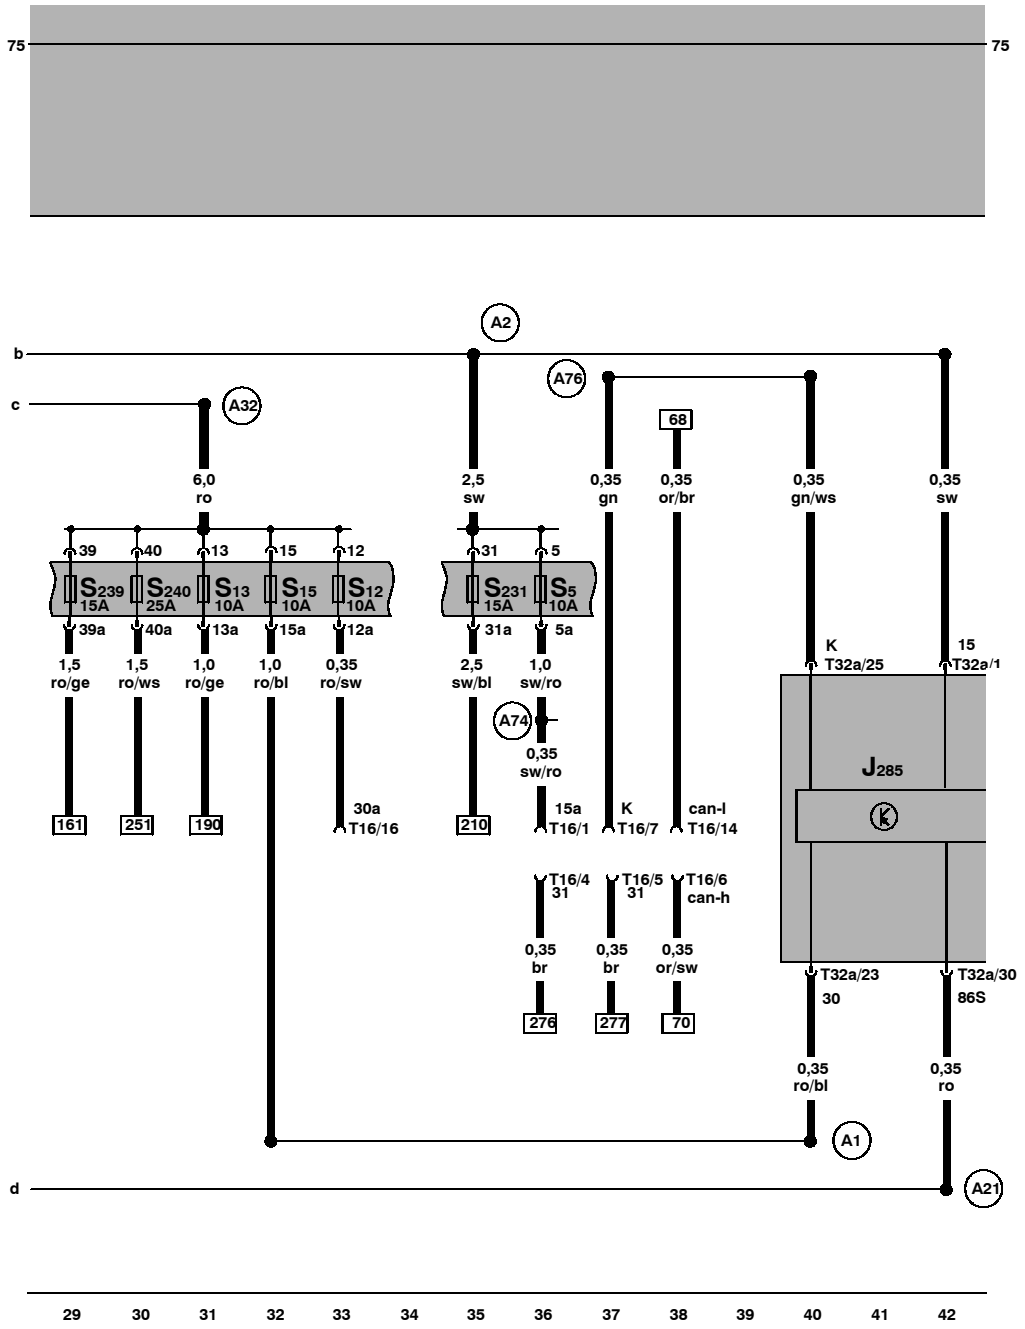

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange


**Instrument cluster, Tachometer, Speedometer
Vehicle Speed Sensor (VSS), Malfunction Indicator
Lamp (MIL), Seat Belt Warning System**

- E24 - Left Seat Belt Switch
- G5 - Tachometer
- G22 - Speedometer Vehicle Speed Sensor (VSS)
- G266 - Oil Level Thermal Sensor
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- K19 - Seat Belt Warning Light
- K83 - Malfunction Indicator Lamp (MIL)
- L75 - Digital Display Light
- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- T10d - 10-Pin Connector, brown, on protective housing for control module, in engine compartment, left
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T10m - 10-Pin Connector, brown
- T23 - 23-Pin Connector, on central control module for comfort system
- T32a - 32-Pin Connector, blue, on instrument cluster
- T32b - 32-Pin Connector, green, on instrument cluster
- Y4 - Odometer Display

- (A26) - wire connection (driver's door contact switch), in instrument panel wiring harness
- (A60) - wire connection (Vehicle speed signal), in instrument cluster wiring harness

* - discontinued from June 2001

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange

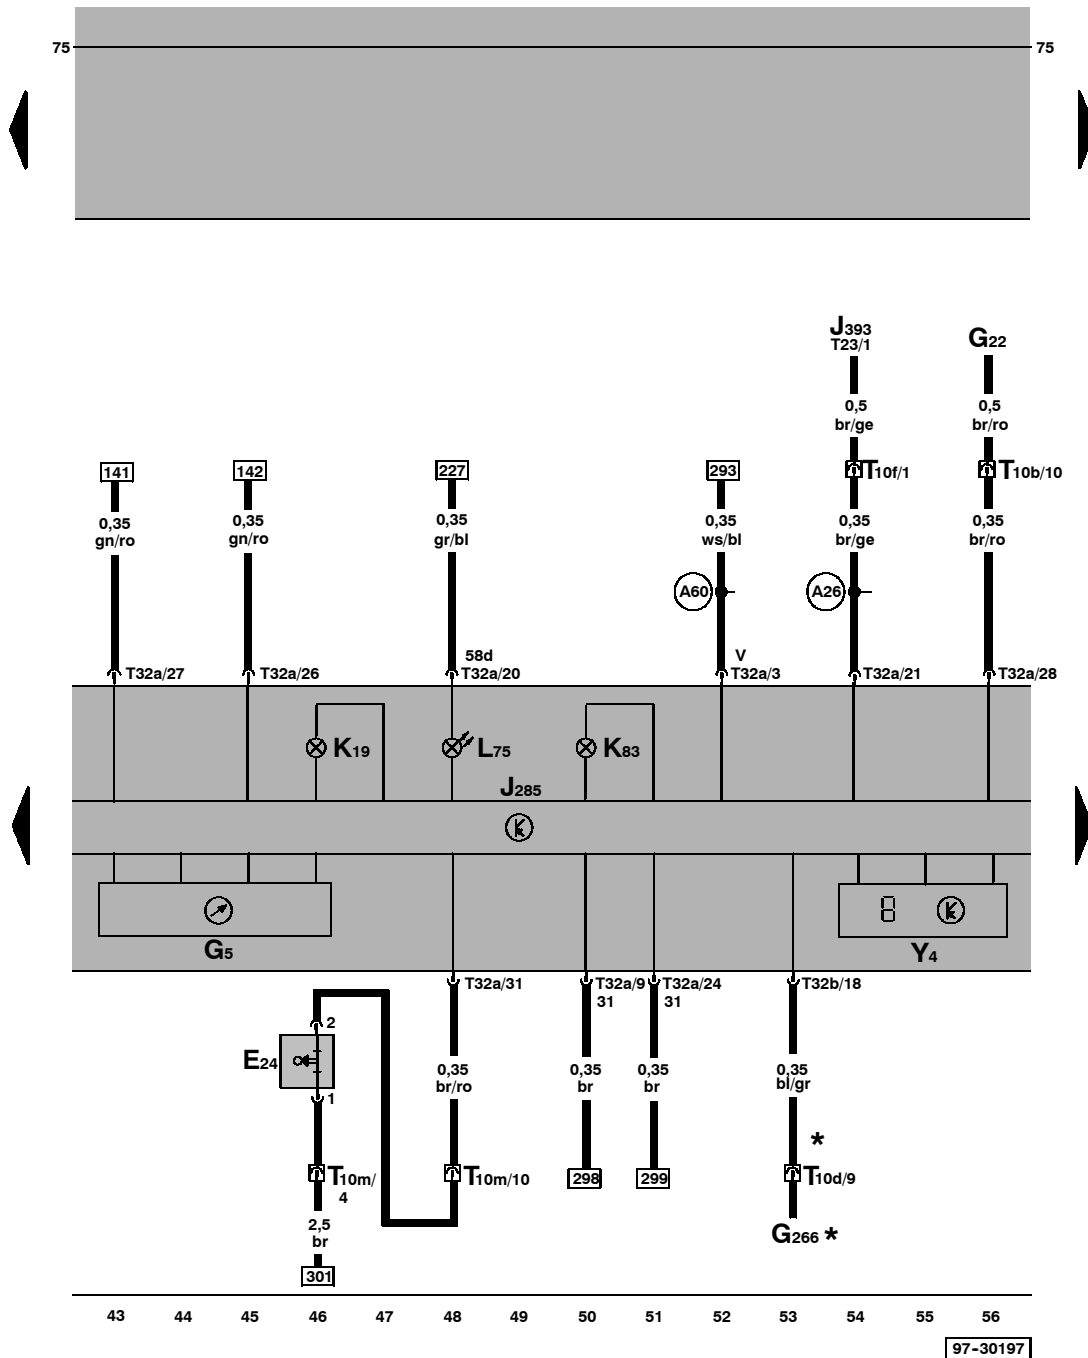


Instrument cluster, Generator Warning Light

- C - Generator (GEN)
- J... - Engine Control Module (ECM)
- J104 - ABS Control Module (w/EDL)
- J217 - Transmission Control Module (TCM)
- J234 - Airbag Control Module
- J285 - Control module with indicator unit in instrument panel insert
- J533 - Data Bus On Board Diagnostic Interface
- K2 - Generator (GEN) Warning Light
- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- T10n - 10-Pin Connector,
- T10p - 10-Pin Connector, yellow
- T15m- 15-Pin Connector,
- T15s - 15-Pin Connector, red, on protective housing for control module, in engine compartment, left
- T32a - 32-Pin Connector, blue, on instrument cluster
- T32b - 32-Pin Connector, green, on instrument cluster
- T75 - 75-Pin Connector
- T88 - Connector, 88 point, on Transmission Control Module (TCM)
- T88a - Connector, (outside temperature indicator) , in instrument panel wiring harness

- (A17) - wire connection (61), in instrument panel wiring harness
- (A121) Connector (high-Bus), in instrument panel wiring harness
- (A122) Connector (low-Bus), in instrument panel wiring harness


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

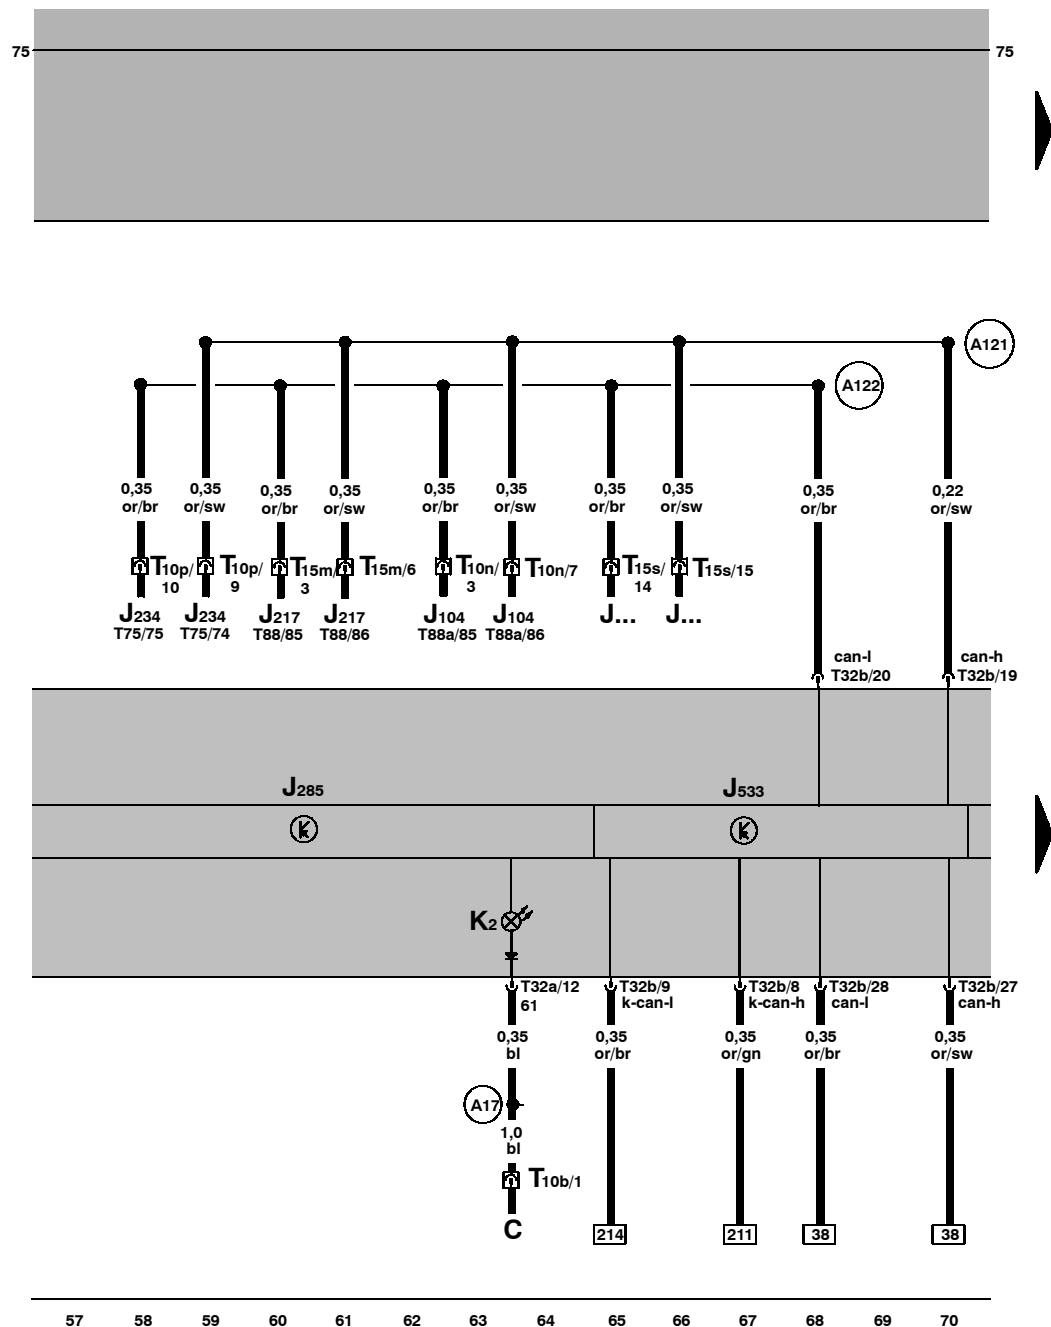

Induction coil of antitheft immonilizer, Instrument cluster, Outside Air Temperature Sensor


- D2 - Induction coil of antiheft immonilizer
- G17 - Outside Air Temperature Sensor
- J285 - Control module with indicator unit in instrument panel insert
- J362 - Control Module for Anti-theft Immobilizer
- K117 - Warning light for anti-theft imobilizer sensor
- K118 - Warning light for brake system
- T2a - Double Connector
- T2b - Double Connector
- T14k - 14-Pin Connector, black
- T15k - 15-Pin Connector, grey
- T32b - 32-Pin Connector, green, on instrument cluster

- (269) - Ground connector (sensor ground) -1-, in instrument panel wiring harness
- (A73) - Connector (outside temperature indicator), in instrument panel wiring harness

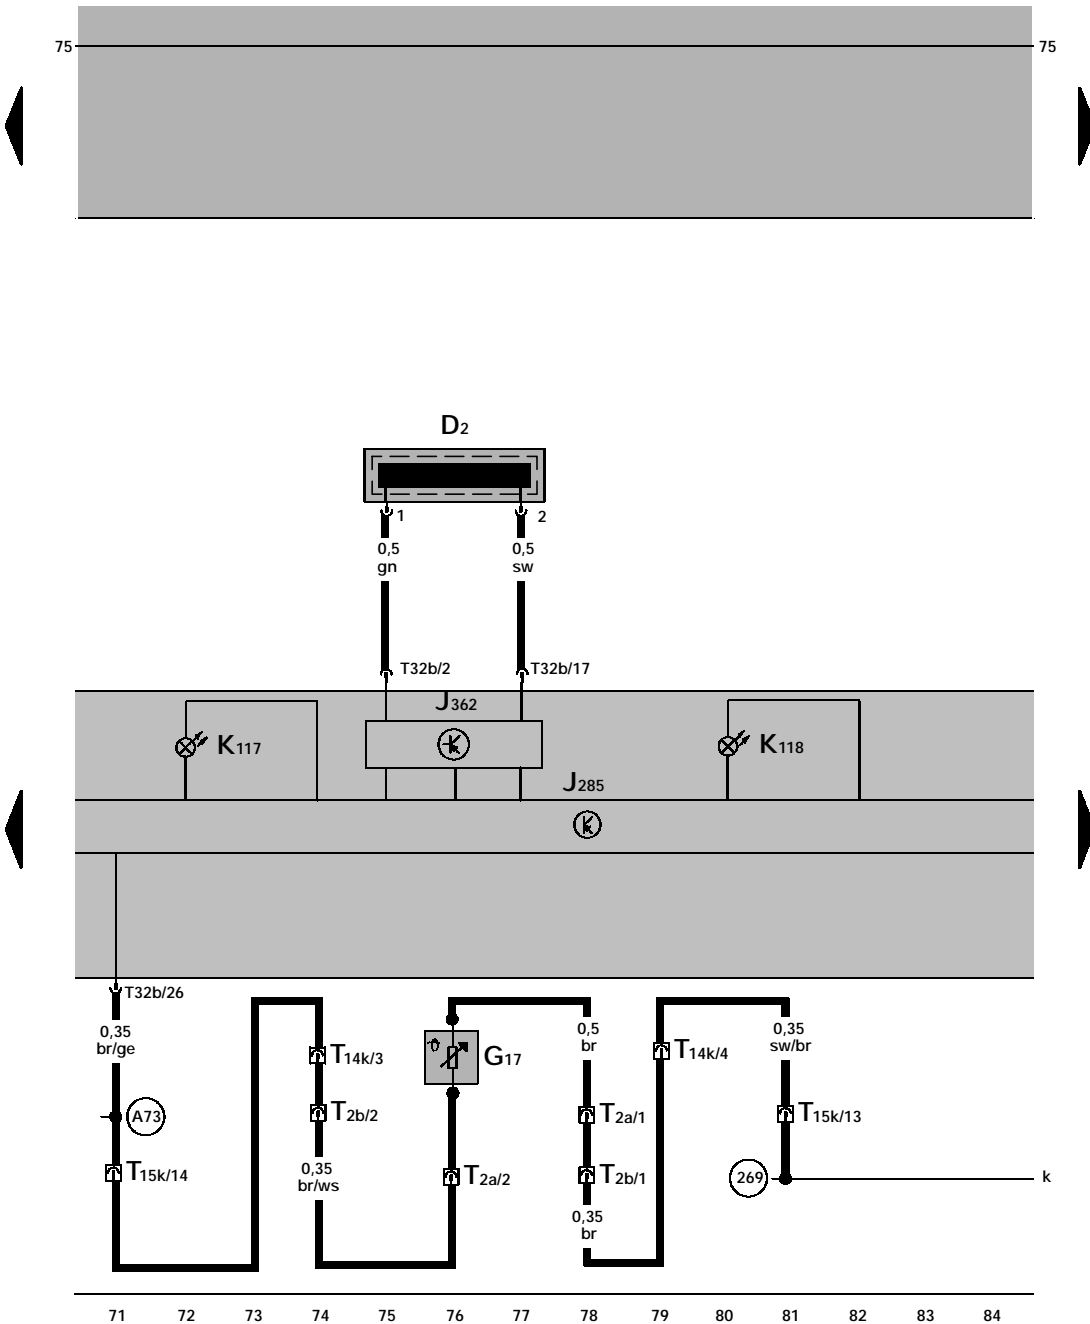

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Instrument cluster, Left and Right Turn Signal Indicator Lights, Multi-Function, Indicator Switch

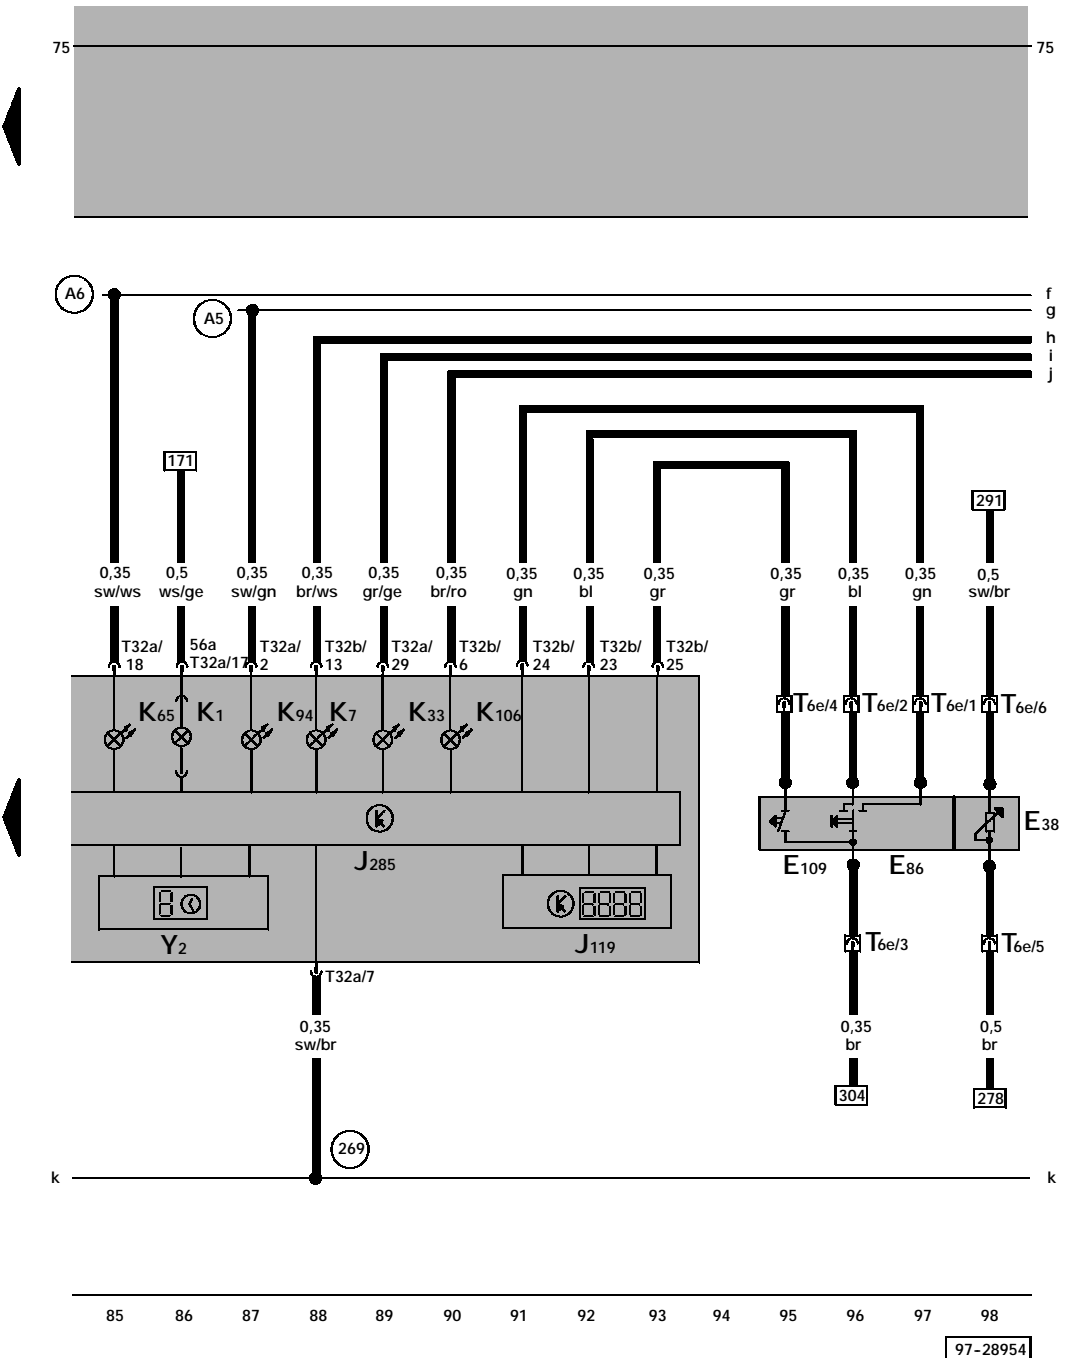

- E38 - Windshield Wiper Intermittent Regulator
- E86 - Multi-Function Indicator Mode Select Switch
- E109 - Multi-Function Indicator Memory Switch
- J119 - Multi-Function Indicator (MFA)
- J285 - Control module with indicator unit in instrument panel insert
- K1 - Headlight High Beam Indicator Light
- K7 - Brake and Parking Brake Warning Light
- K33 - Brake Fluid Level Warning Light
- K65 - Left Turn Signal Indicator Light
- K94 - Right Turn Signal Indicator Light
- K106 - Low Windshield Washer Fluid Level Indicator Light
- T6e - 6-Pin Connector, black, near steering column, right
- T32a - 32-Pin Connector, blue, on instrument cluster
- T32b - 32-Pin Connector, green, on instrument cluster
- Y2 - Digital Clock

- (269) - Ground connector (sensor ground) -1-, in instrument panel wiring harness
- (A5) - plus connection (right turn signal), in instrument panel wiring harness
- (A6) - plus connection (left turn signal), in instrument panel wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange



Windshield Washer Fluid Level Sensor, Daytime Running Lights Change-over Relay, Parking Brake Warning Light Switch and Brake Fluid Level Warning Light Switch

- F9 - Parking Brake Warning Light Switch
- F34 - Brake Fluid Level Warning Switch
- G - Sender for fuel gauge
- G2 - Engine Coolant Temperature (ECT) Sensor
- G33 - Windshield Washer Fluid Level Sensor
- J89 - Daytime Running Lights Change-over Relay
- N74 - Series Resistance Wiring
- T6c - 6-Pin Connector, blue, connector station A-pillar, left
- T6v - 6-Pin Connector, violet, connector station A-pillar, right
- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- T10c - 10-Pin Connector, violet, connector station A-pillar, left
- T10s - 10-Pin Connector, rose, connector station A-pillar, left
- T10t - 10-Pin Connector, red, connector station A-pillar, left

- (269) - Ground connector (sensor ground) -1-, in instrument panel wiring harness
- (A115) - Connection (parking brake control), in instrument panel wiring harness

- * - through April 2003
- ** - from May 2003

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

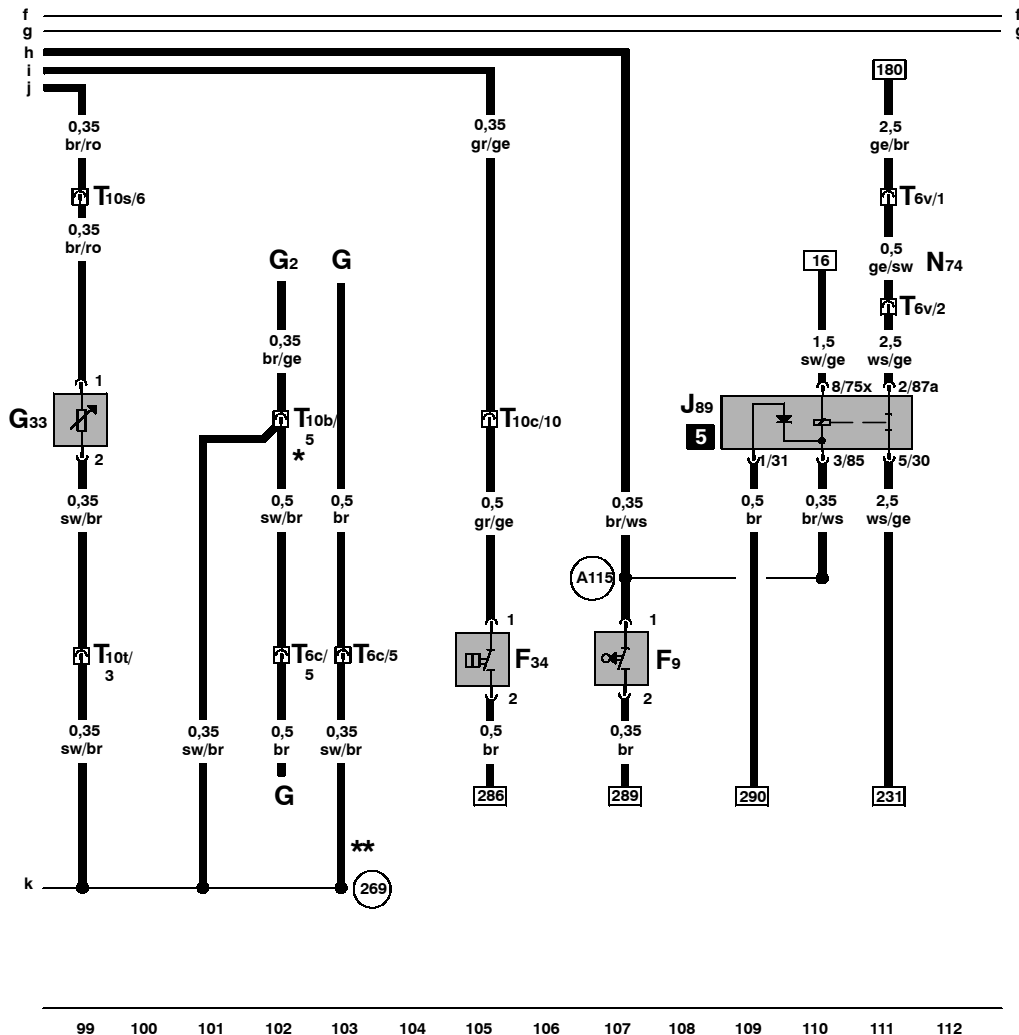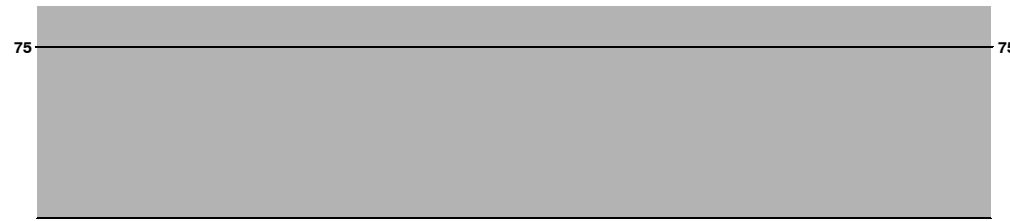


Turn Signal Switch, Headlight Dimmer/Flasher Switch

- E2 - Turn Signal Switch
- E4 - Headlight Dimmer/Flasher Switch
- T12 - 12-Pin Connector, near steering column


- (A5) - plus connection (right turn signal), in instrument panel wiring harness
- (A6) - plus connection (left turn signal), in instrument panel wiring harness
- (A51) - wire connection (56), in instrument panel wiring harness
- (A95) - Connection 1 (56a), in instrument panel wiring harness

* - models with headlight washer system only

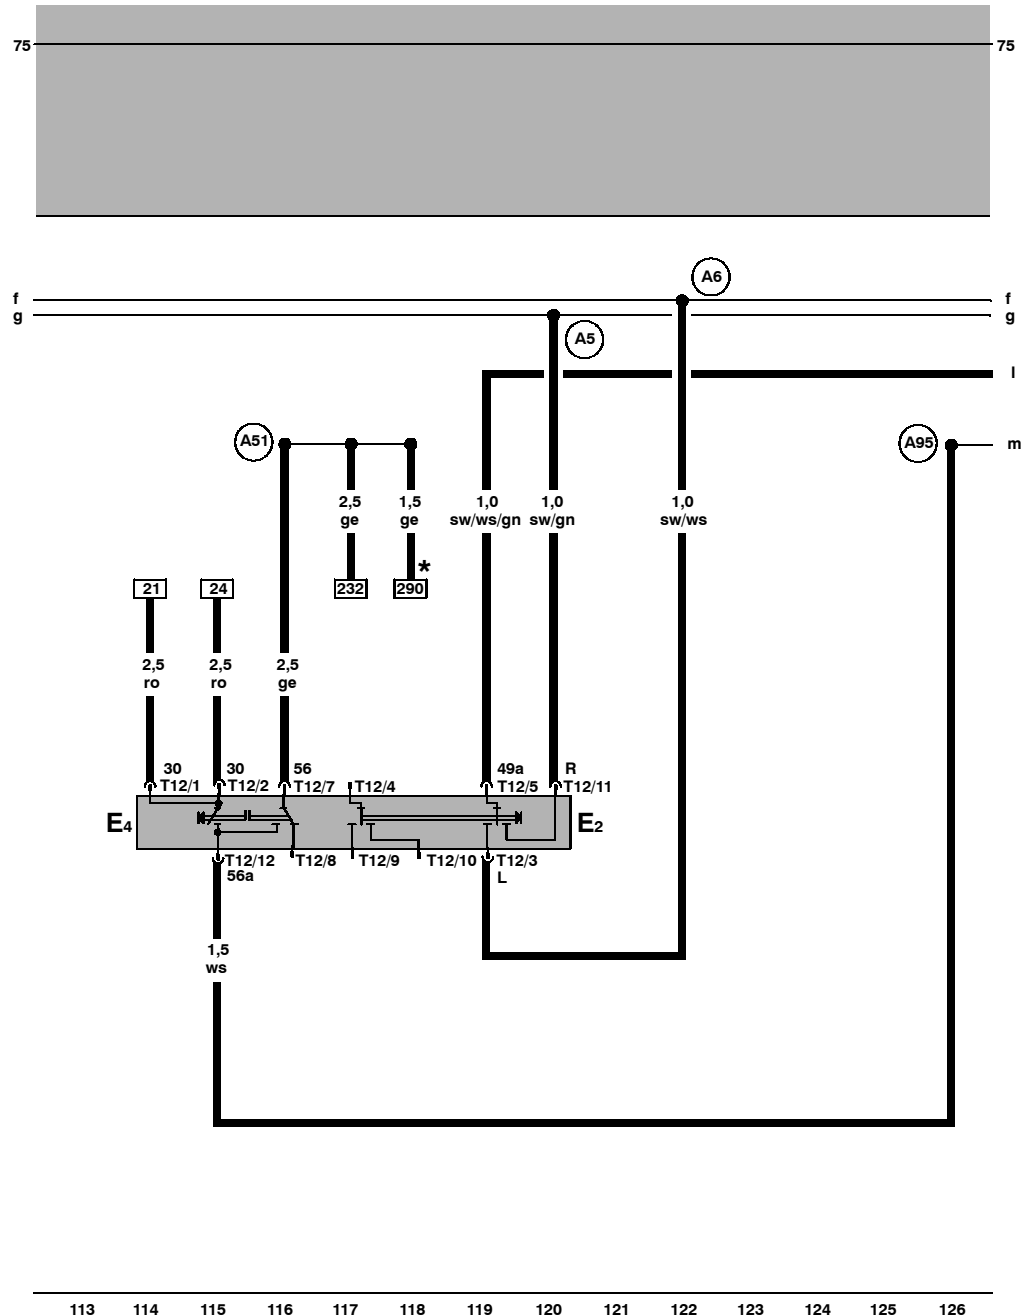

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Left Front Fog Light, Fog Light Relay

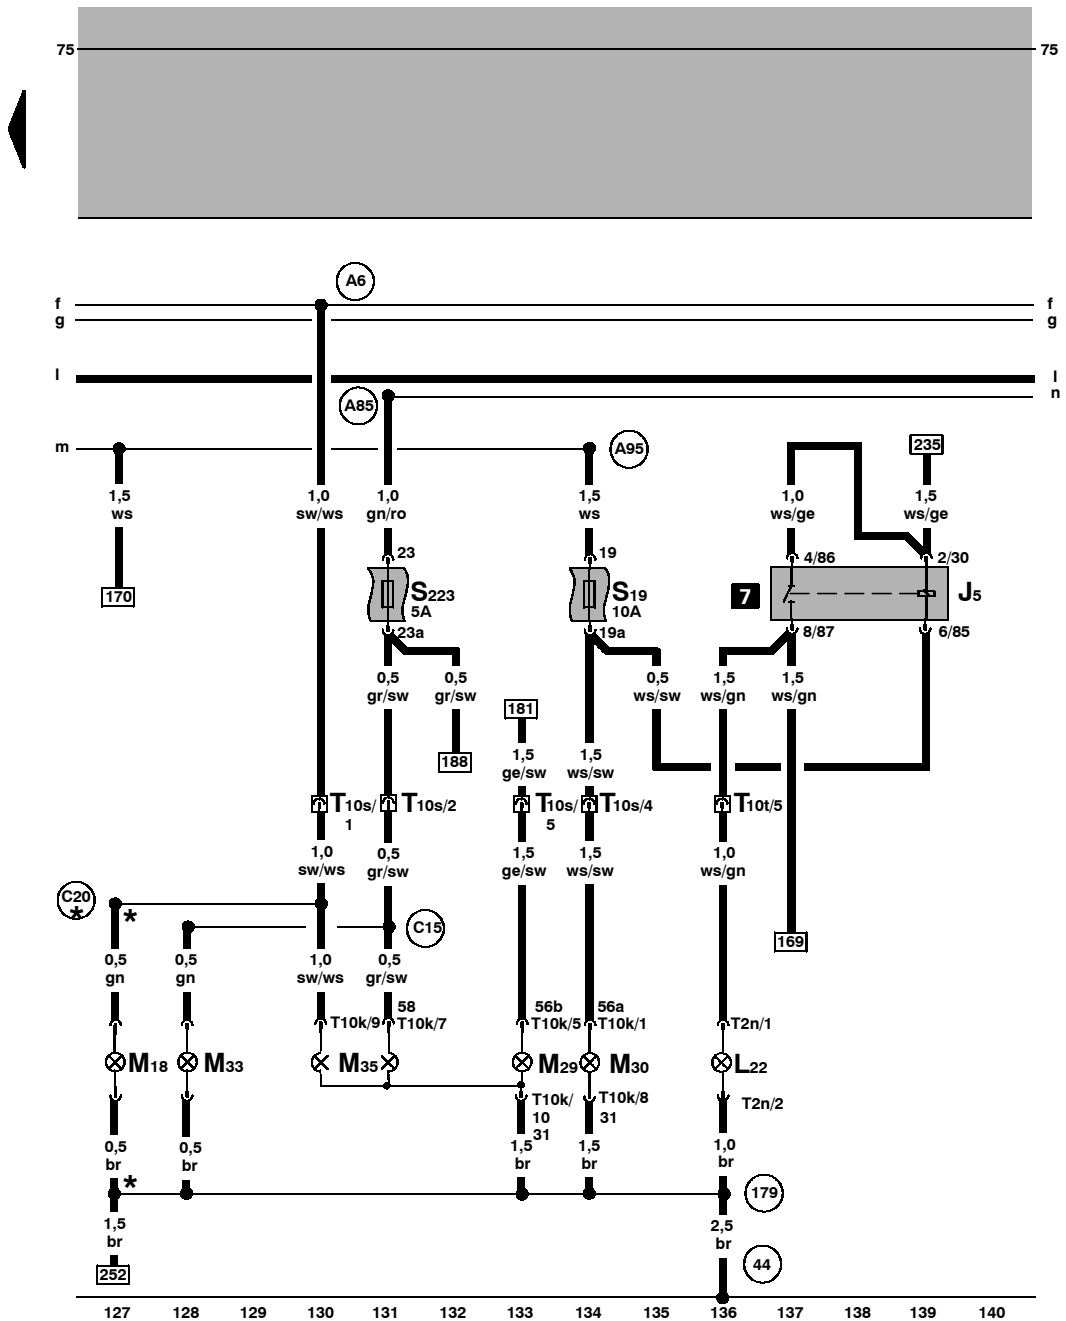

- J5 - Fog Light Relay, on auxiliary relay panel
- L22 - Left Front Fog Light
- M18 - Left, Side Turn Signal Light
- M29 - Left Low Beam Headlight
- M30 - Left High Beam Headlight
- M33 - Light for side marker front left
- M35 - Light for turn signal and side marker, front, left
- S19 - Fuse
- S223 - Fuse in fuse holder
- T2n - Double Connector, on Left,Front Fog Light
- T10k - 10-Pin Connector, on headlight left
- T10s - 10-Pin Connector, pink, connector station A-pillar, left
- T10t - 10-Pin Connector, red, connector station A-pillar, left

- (44) - Ground connection, on left A-pillar, lower part
- (179) - Ground connection, in left headlight wiring harness
- (A6) - plus connection (left turn signal), in instrument panel wiring harness
- (A85) - Connector (58R), in Instrument panel wiring harness
- (A95) - Connection 1 (56a), in instrument panel wiring harness
- (C15) - Wire connection -1-, in headlight wiring harness
- (C20) - Wire Connection (left turn signal), in headlight wiring harness

* - through October 2003


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

License Plate Light

- S4 - Fuse
- S22 - Fuse
- T2 - Double Connector, in rear lid
- T2s - Double Connector, black
- T2u - Double Connector, black
- T8e - 8-Pin Connector, black, in rear lid, right
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- X - License Plate Light

- (A85) - Connector (58R), in Instrument panel wiring harness
- (W11) - wire connection (58), in rear lid wiring harness

- - wagon only
- ** - sedan only

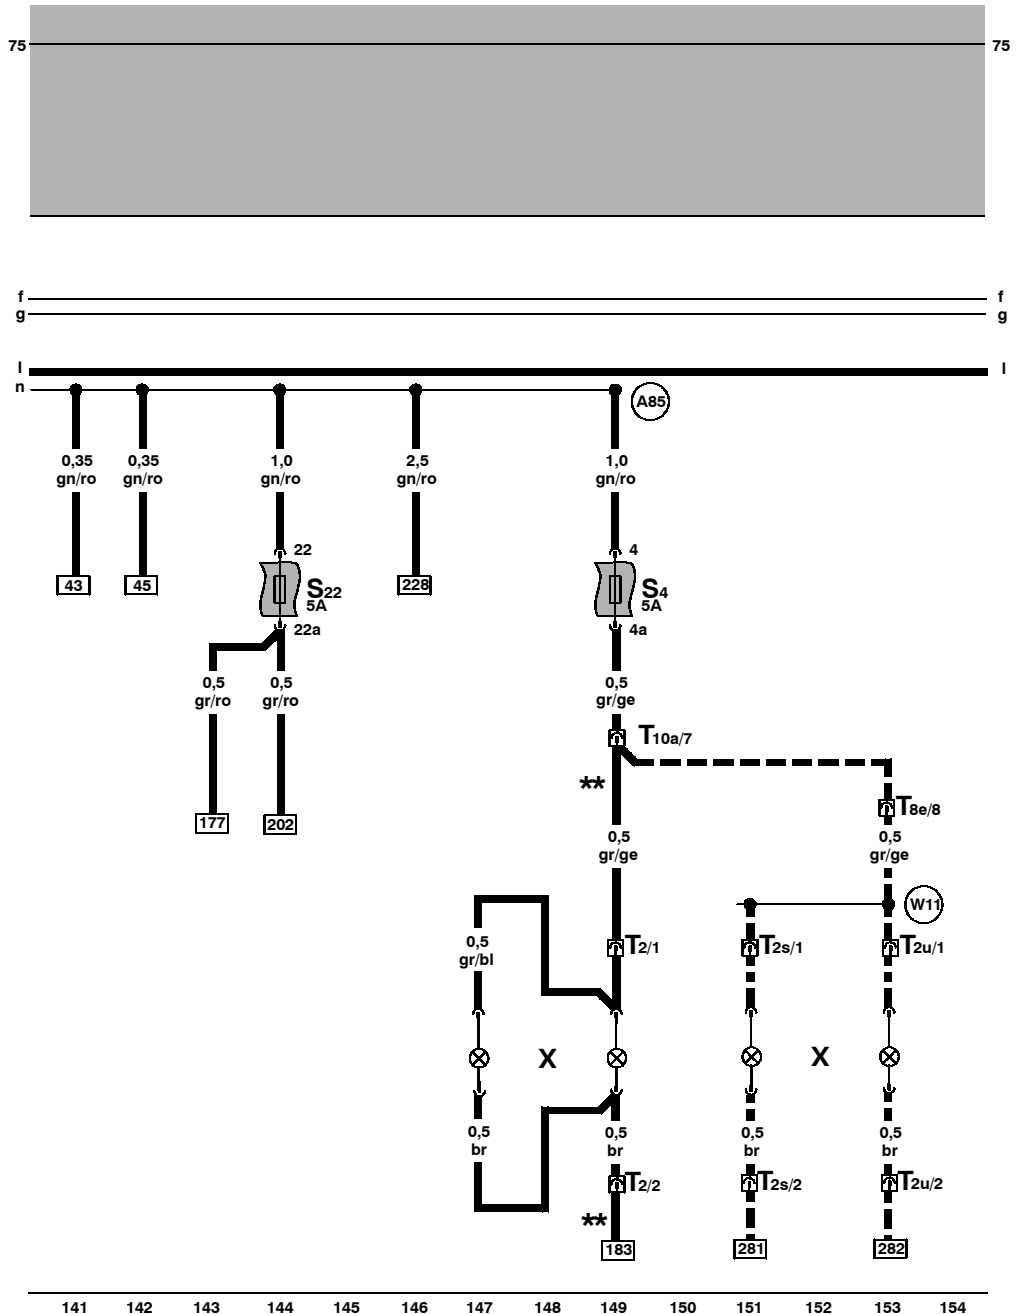

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange

141 142 143 144 145 146 147 148 149 150 151 152 153 154


Emergency Flasher Switch

- E3 - Emergency Flasher Switch
- J393 - Central control module for comfort system
- J517 - Auxiliary Emergency Flasher Relay **
- J734 - Warning Lamp Auxiliary Relay **
- K6 - Indicator light for emergency flasher system
- L35 - Emergency Flasher Switch Light
- T7a - 7-Pin Connector, on emergency flasher switch
- T10v - 10-Pin Connector, violet, connector station A-pillar, right
- T15 - 15-Pin Connector, on central control module for comfort system

- (30) - Ground connection, -1-, beside fuse/relay panel
- (A5) - plus connection (right turn signal), in instrument panel wiring harness
- (A6) - plus connection (left turn signal), in instrument panel wiring harness

- * - through April 2003
- ** - from May 2003

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

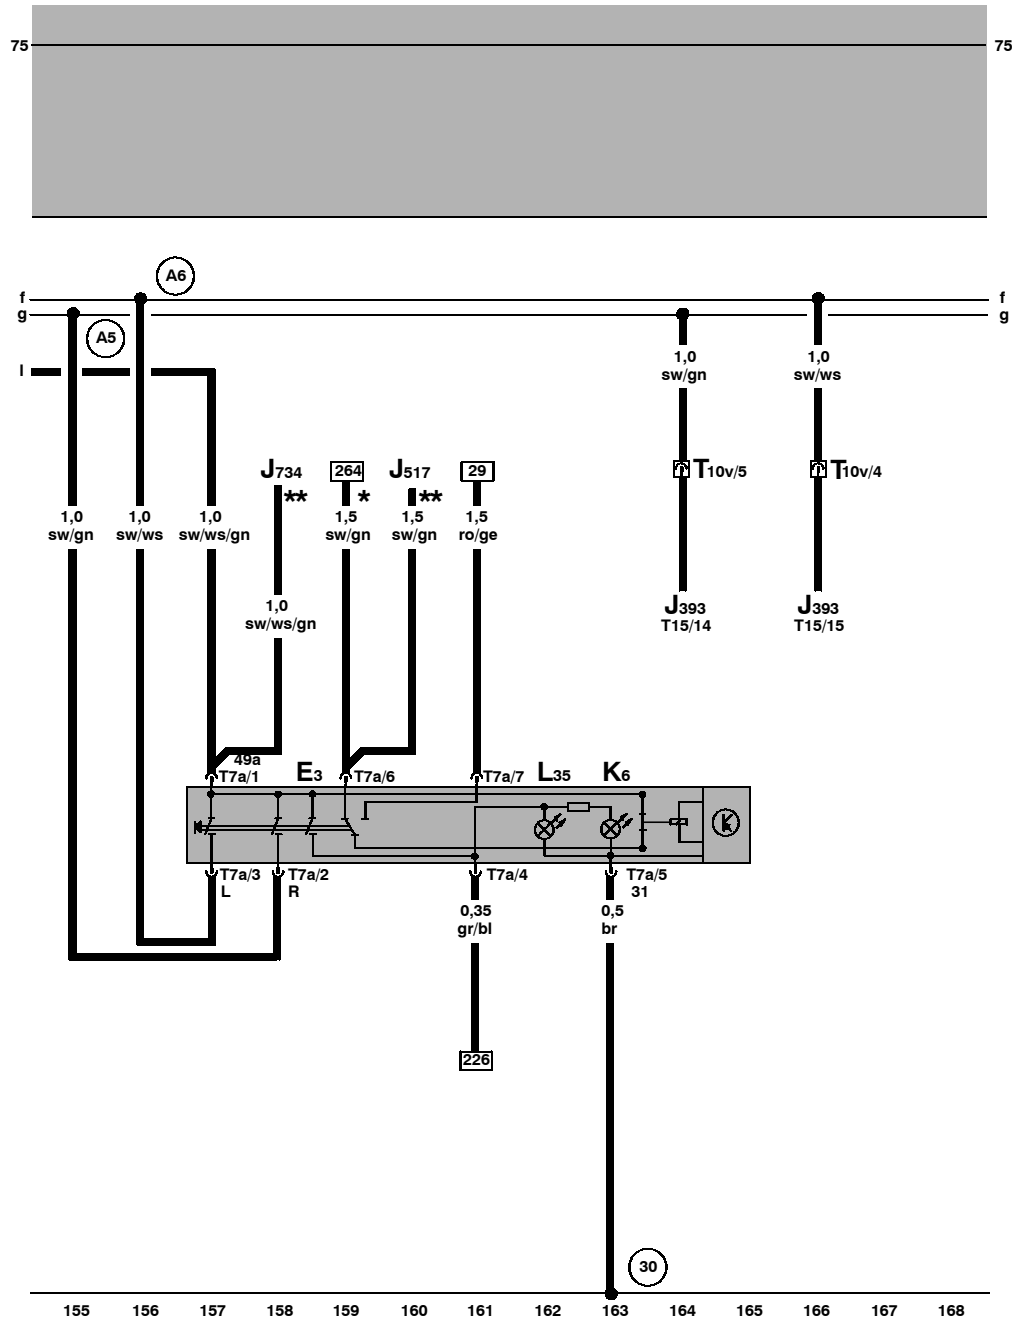



Right Front Headlights, Right Front Fog Light

- L23 - Right Front Fog Light
- M19 - Right, Side Turn Signal Light
- M31 - Right Low Beam Headlight
- M32 - Right High Beam Headlight
- M34 - Light for side marker front left
- M36 - Light for turn signal and side marker, front, right
- S18 - Fuse
- S20 - Fuse
- S21 - Fuse
- T2m - Double Connector
- T6d - 6-Pin Connector, pink, connector station A-pillar, right
- T6k - 6-Pin Connector, red, connector station A-pillar, right
- T10j - 10-Pin Connector
- (43) - Ground connection, on right A-pillar, lower part
- (176) - Ground connection, in right headlight wiring harness
- (A5) - plus connection (right turn signal), in instrument panel wiring harness
- (A113) - Connection 2 (daytime running lights), in instrument panel wiring harness
- (C16) - Wire connection -2-, in headlight wiring harness
- (C19) - Connection -1- (right turn signal), in headlight wiring harness

* - through October 2003

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

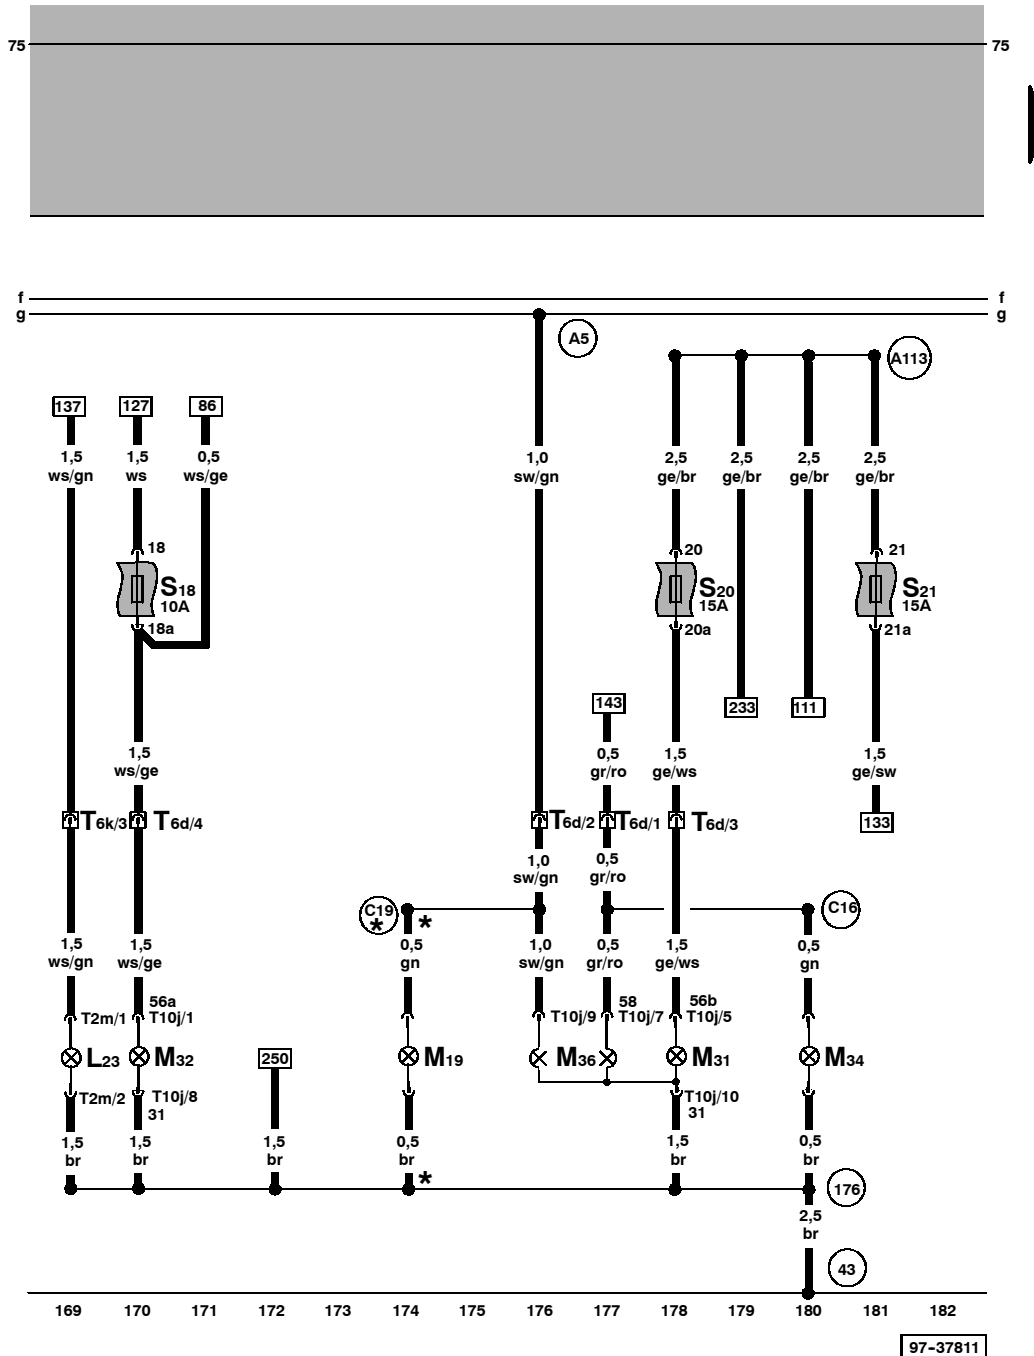

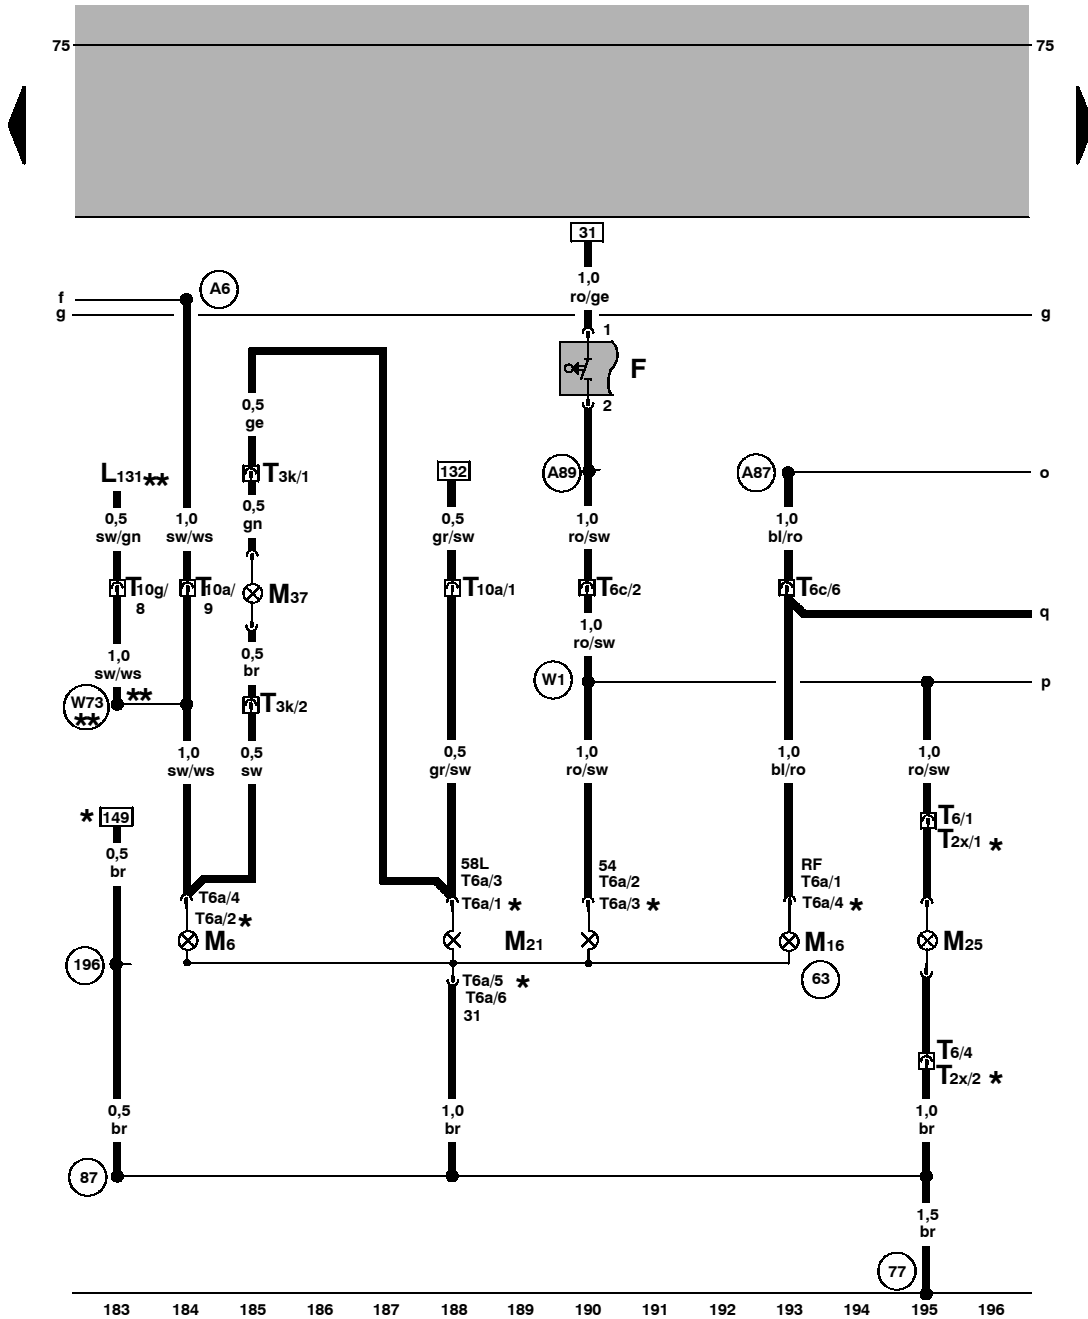

Brake Light Switch, Left Brake/Tail Light, Left Rear Turn Signal Light, left Back-Up Light, High-mount Brake Light


- F - Brake Light Switch
- L131 - Left Mirror Turn Signal Lamp
- M6 - Left Rear Turn Signal Light
- M16 - Left Back-Up Light
- M21 - Left Brake/Tail Light
- M25 - High-mount Brake Light
- M37 - Side marker light, left rear
- T2x - Double Connector
- T3k - 3-Pin Connector
- T6 - 6-Pin Connector, black, in luggage compartment, left (wagon only)
- T6a - 6-Pin Connector, on tail light, left
- T6c - 6-Pin Connector, blue, connector station A-pillar, left
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T10g - 10-Pin Connector

- (63) - Ground connection, on left taillight bulb holder
- (77) - Ground connection (lower left B-pillar)
- (87) - Ground connection -2-, in rear wiring harness
- (196) - Ground connection -3-, in wiring harness, rear
- A6 - plus connection (left turn signal), in instrument panel wiring harness
- A87 - Connector (reverse lamp), in instrument panel wiring harness
- A89 - Connector 2 (54) (in instrument panel wiring harness)
- W1 - plus connection (54), in rear wiring harness
- W73 - Left Turn Signal Plus Connection (in floor wiring harness)

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

- * - sedan only
- ** - from November 2003

Back-Up Light Switch, Right Rear Turn Signal Light, Right Back-Up Light, Right Brake/Tail Light

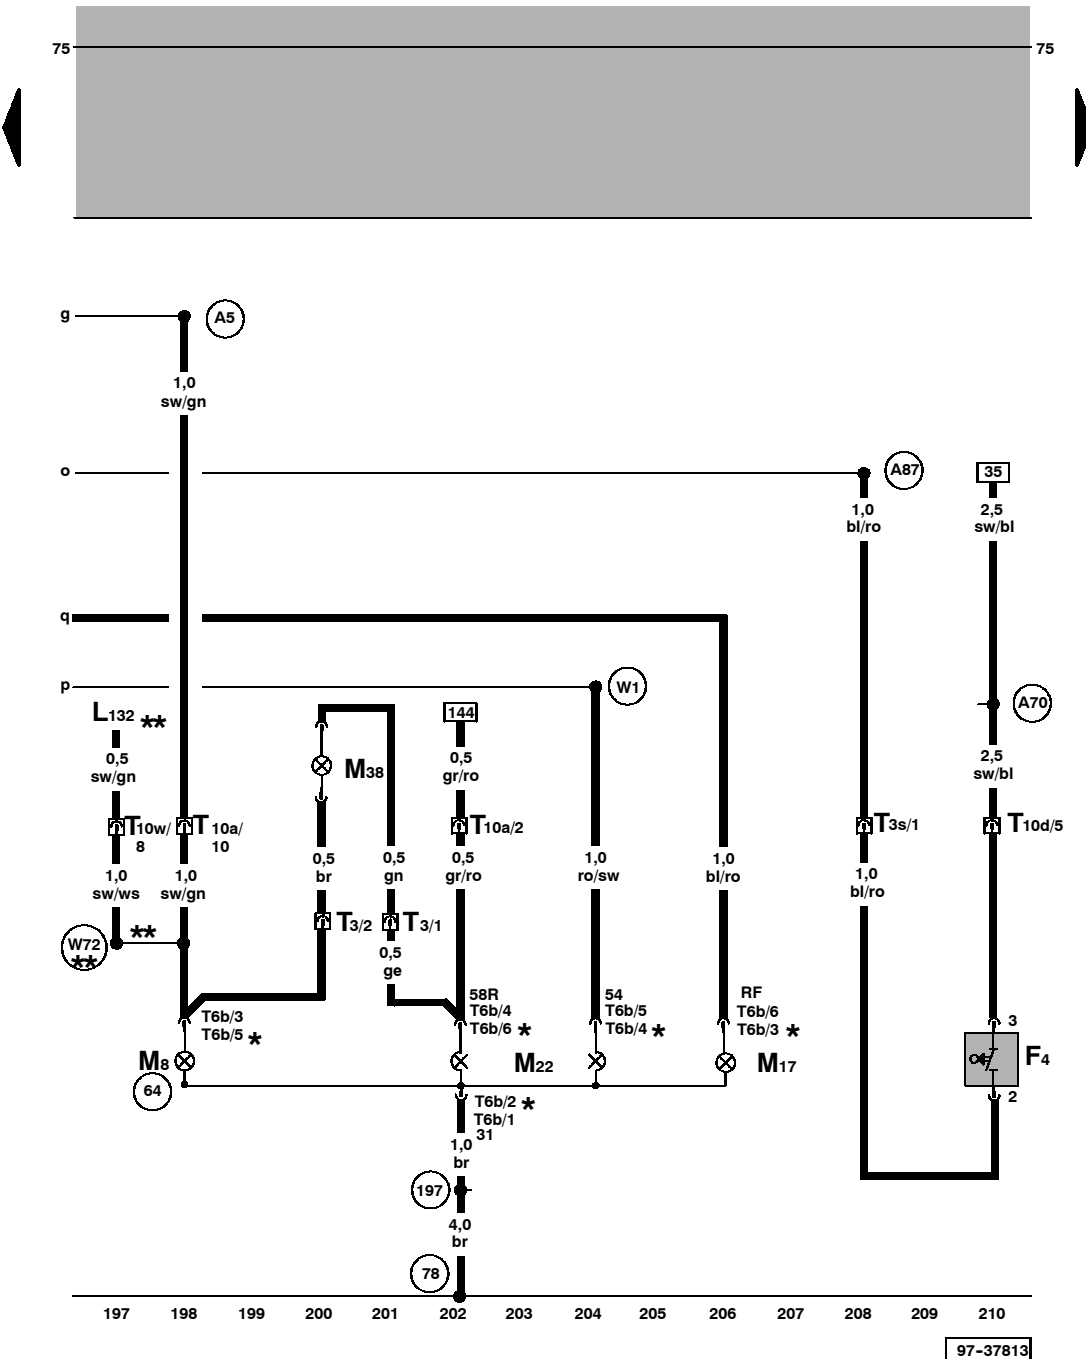


- F4 - Back-Up Light Switch
- L132 - Right Mirror Turn Signal Lamp
- M8 - Right Rear Turn Signal Light
- M17 - Right Back-Up Light
- M22 - Right Brake/Tail Light
- M38 - Side marker light, right rear
- T3 - 3-Pin Connector
- T3s - 3-Pin Connector
- T6b - 6-Pin Connector, on tail light, right
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T10d - 10-Pin Connector, brown, on protective housing for control module, in engine compartment, left
- T10w - 10-Pin Connector, black
- (64) - Ground connection, on right taillight bulb holder
- (78) - Ground Connection, (lower right B-pillar)
- (197) - Ground connection -4-, in wiring harness rear
- (A5) - plus connection (right turn signal), in instrument panel wiring harness
- (A70) - Connector (15a, fuse 231), in instrument panel wiring harness
- (A87) - Connector (reverse lamp), in instrument panel wiring harness
- (W1) - plus connection 1 (54), in rear wiring harness
- (W72) - Right Turn Signal Plus Connection (in floor wiring harness)

- * - sedan only
- ** - from November 2003

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Radio connection, Cigarette Lighter, Panel Vent Illumination

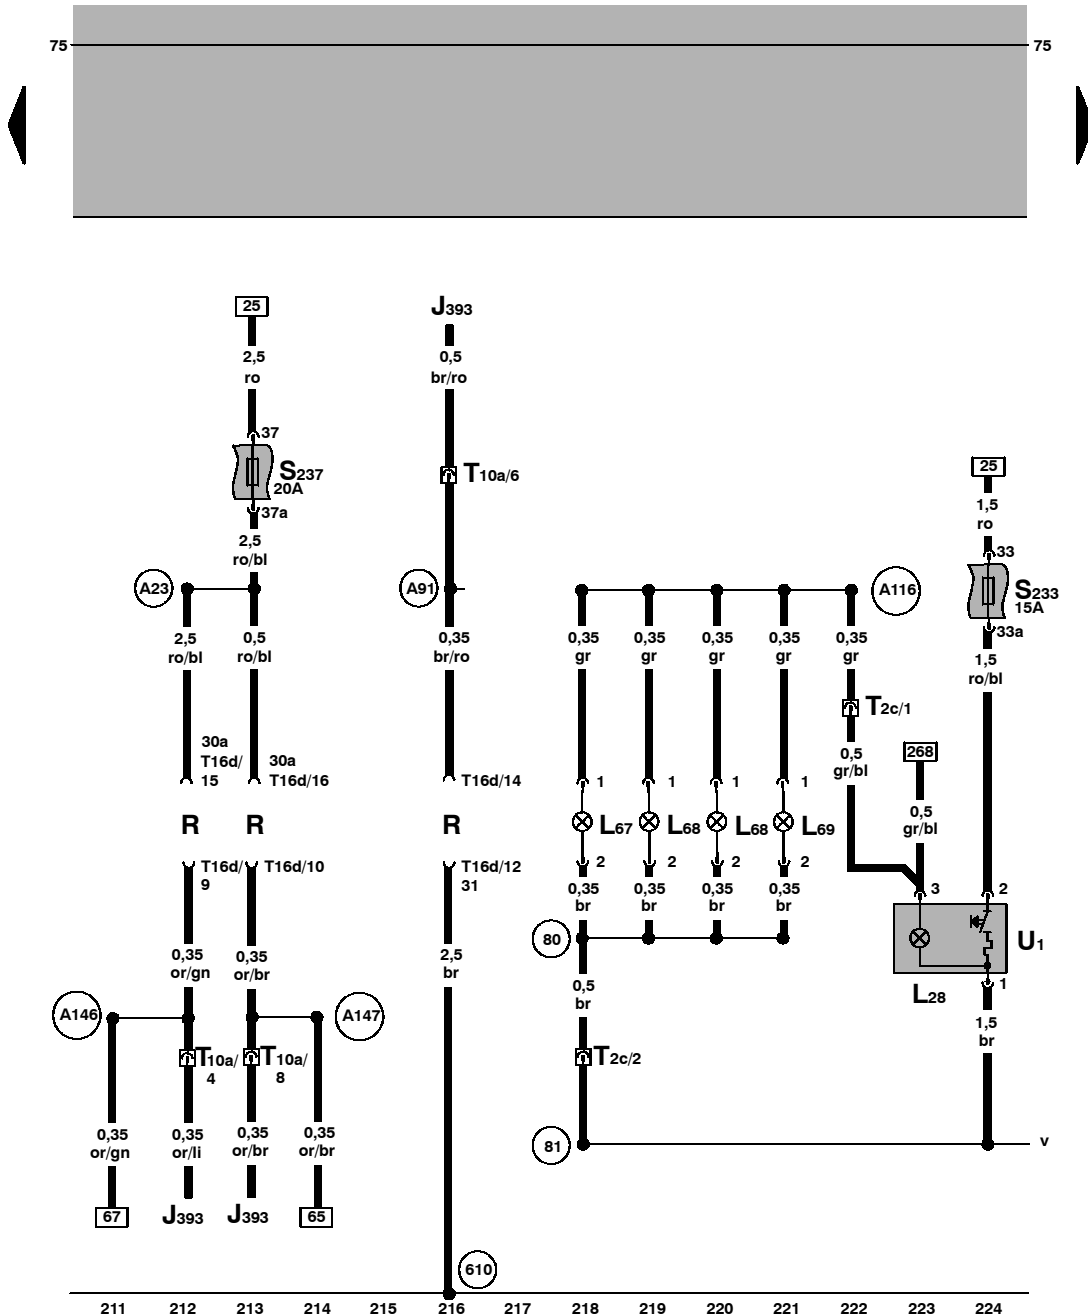

- J393 - Central control module for comfort system
- L28 - Cigarette Lighter Light
- L67 - Left Instrument Panel Vent Illumination
- L68 - Center Instrument Panel Vent Illumination
- L69 - Right Instrument Panel Vent Illumination
- R - Radio
- S233 - Fuse in fuse holder
- S237 - Fuse in fuse holder
- T2c - Double Connector (behind glove box, right side)
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T16d - 16-Pin Connector, black, on radio
- U1 - Cigarette Lighter


- (80) - Ground connection -1-, in instrument panel wiring harness
- (81) - Ground connection -1-, in instrument panel wiring harness
- (610) - Ground connection (Audio) (under center console, front)
- (A23) - wire connection (30a), in instrument panel wiring harness
- (A91) - Connector (signal for instrument panel insert), in instrument panel wiring harness
- (A116) - Connection -2- (58d), in instrument panel wiring harness
- (A146) - Comfort System High-bus Connection (in instrument panel wiring harness)
- (A147) - Comfort System Low-bus Connection (in instrument panel wiring harness)

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Light switch

- E1 - Light switch
- E23 - Fog Light Switch
- K17 - Fog Light Indicator Light
- L9 - Headlight Switch Light
- S236 - Fuse in fuse holder


- (81) - Ground connection -1-, in instrument panel wiring harness
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A83) - Connector (daytime running lights), in instrument panel wiring harness

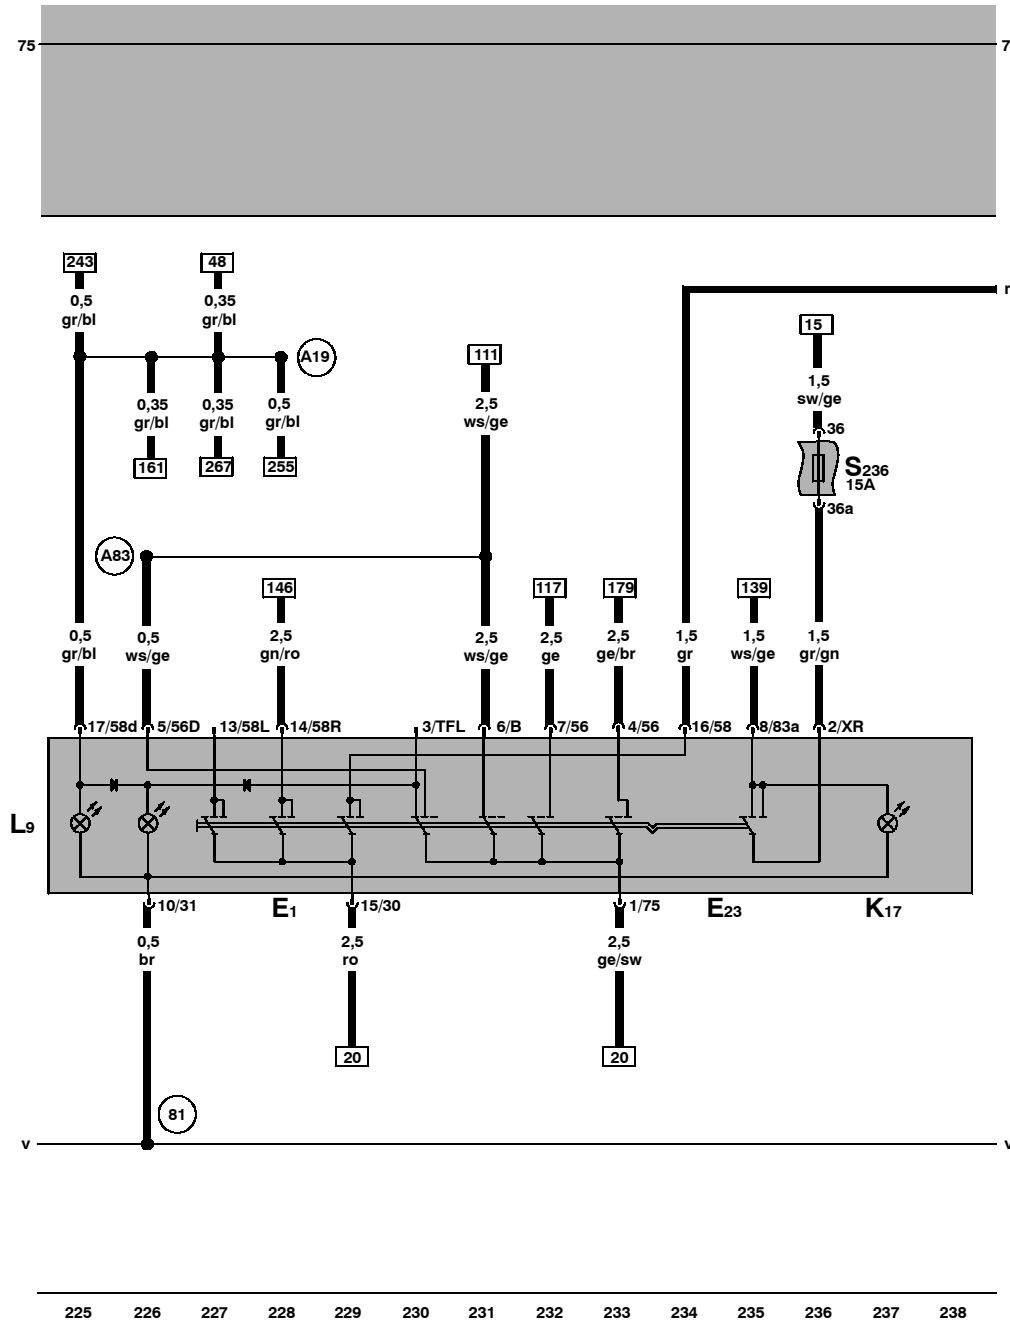

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

225 226 227 228 229 230 231 232 233 234 235 236 237 238

Instrument Panel Light Dimmer Switch, Dual Horns, Dual Horn Relay

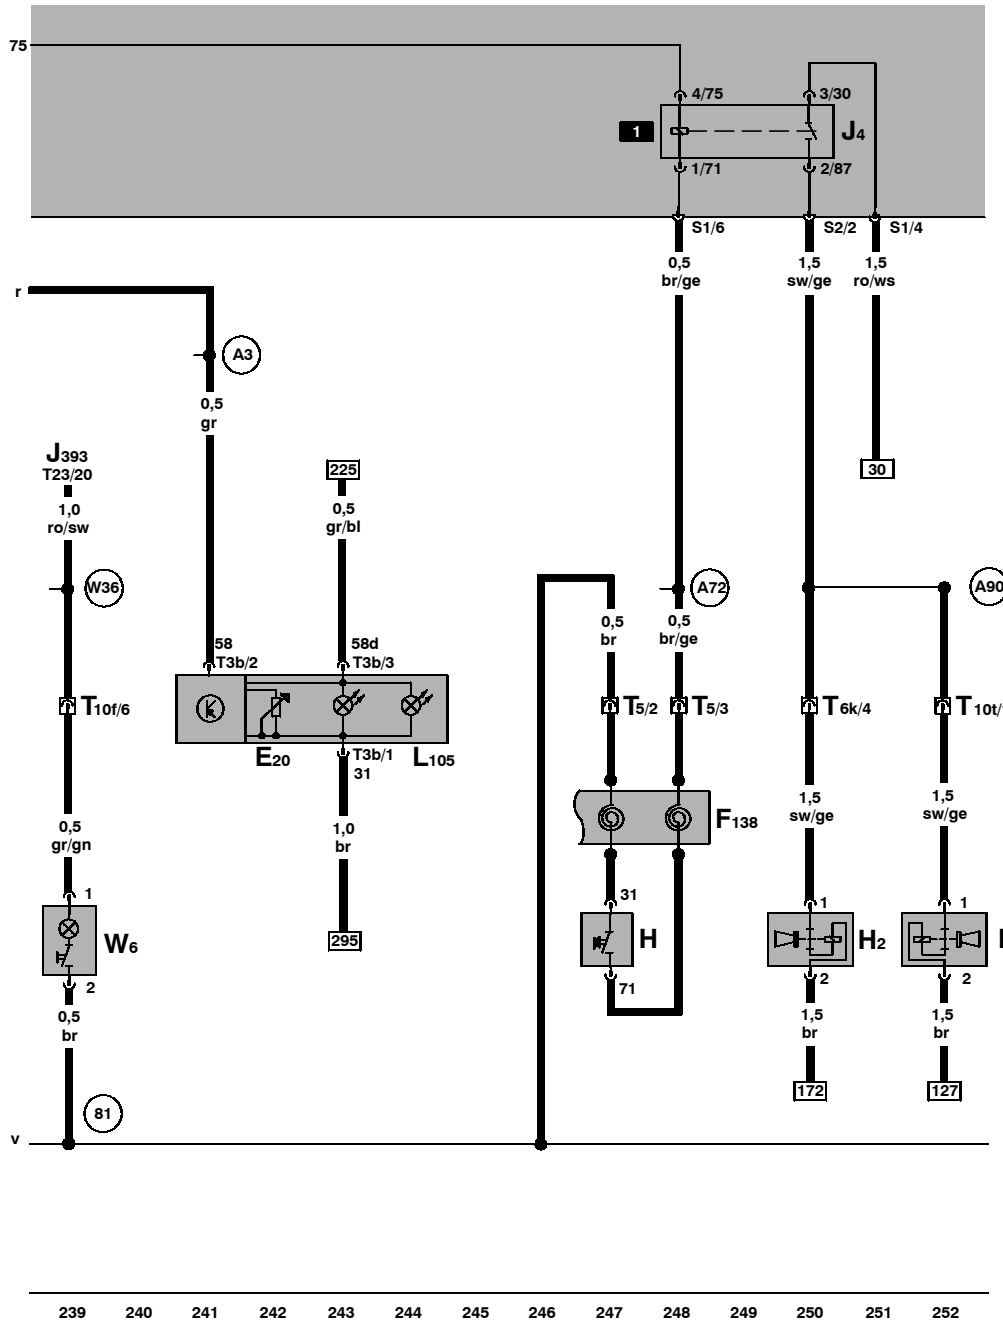


- E20 - Instrument Panel Light Dimmer Switch
- F138 - Airbag Spiral Spring/Return Spring With Slip Ring
- H - Signal horn activation
- H2 - High Tone Horn
- H7 - Low Tone Horn
- J4 - Horn Relay
- J393 - Central control module for comfort system
- L105 - Illumination for lighting controller
- T3b - 3-Pin Connector
- T5 - 5-Pin Connector, yellow, near steering column
- T6k - 6-Pin Connector, red, connector station A-pillar, right
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T10t - 10-Pin Connector, red, connector station A-pillar, left
- T23 - 23-Pin Connector, on Central control module for comfort system
- W6 - Glove Compartment Light
- (81) - Ground connection -1-, in instrument panel wiring harness
- (A3) - plus connection (58), in instrument panel wiring harness
- (A72) - Connector (71), in instrument panel wiring harness
- (A90) - Connector (two-tone horn), in instrument panel wiring harness
- (W36) - Positive connection (30a) in floor wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Fresh Air Blower Switch, Switch for fresh air blower and recirculated air, Fresh Air Blower, Fresh Air Blower Series Resistance with Fuse


- E9 - Fresh Air Blower Switch
- E184 - Switch for fresh air blower and recirculated air
- J517 - Auxiliary Emergency Flasher Relay **
- K114 - Fresh Air and Recirculating Air Mode Indicator Light
- L16 - Fresh Air Control Lever Light
- N24 - Fresh Air Blower Series Resistance With Fuse
- S2 - Fuse
- S225 - Fuse in fuse holder
- T4a - 4-Pin Connector
- T6g - 6-Pin Connector, on fresh air blower switch
- T8a - 8-Pin Connector, on switch for fresh air blower and recirculated air
- V2 - Fresh Air Blower
- V154 - Servo motor for fresh-/recirculating air door
- (135) - Ground connection -2-, in instrument panel wiring harness

- * - through April 2003
- ** - from May 2003

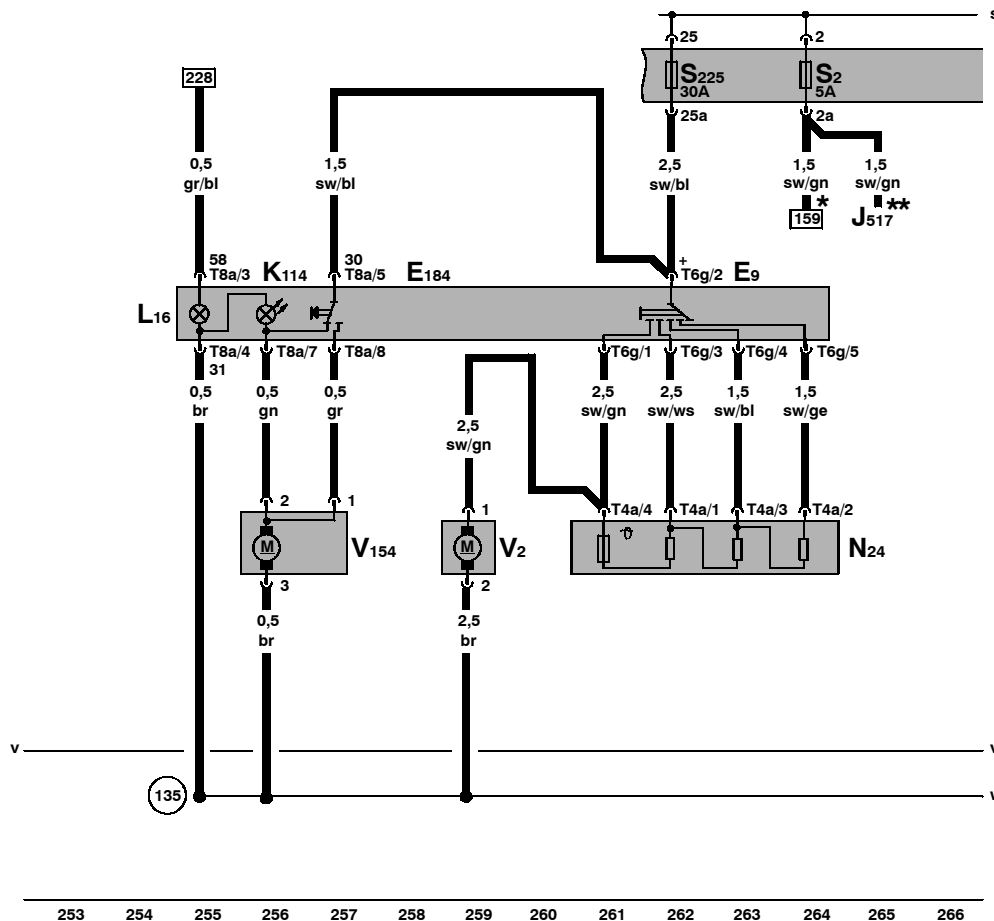

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Heated rear window, Rear window defogger switch

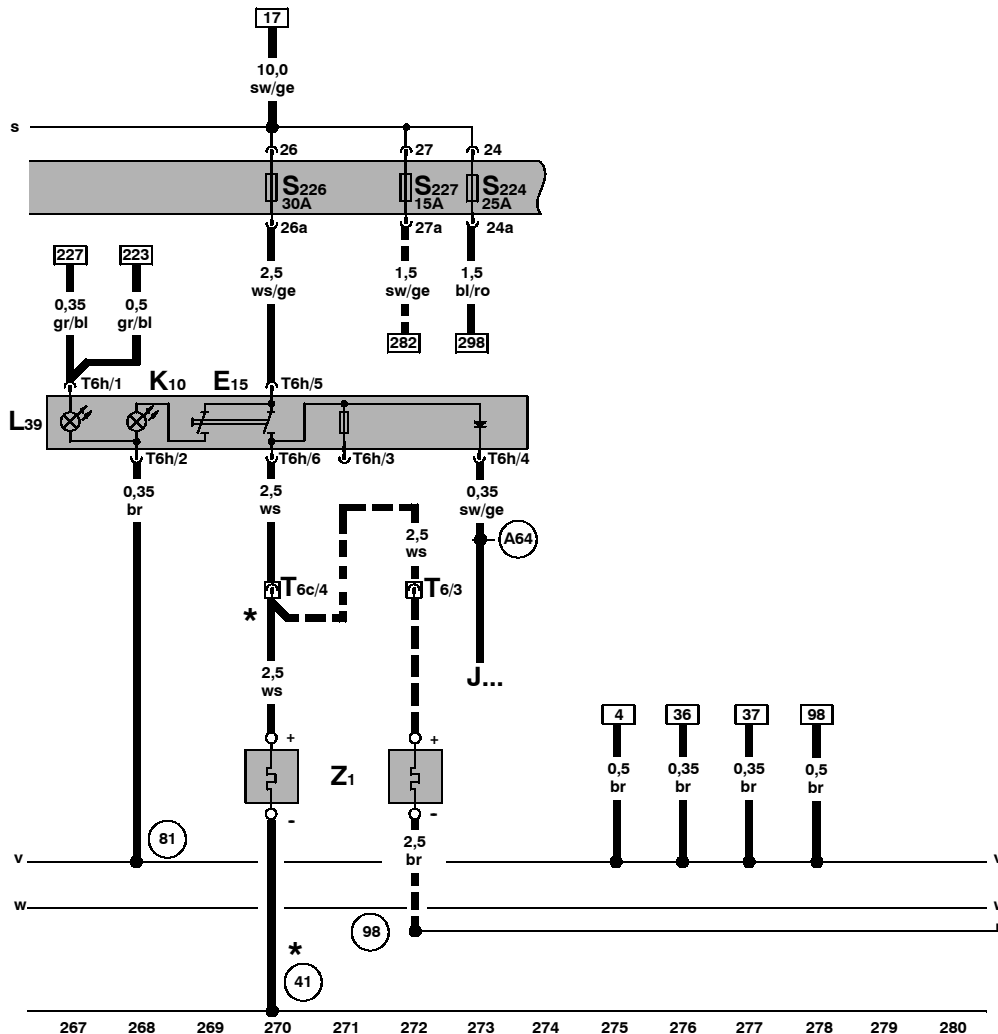

- E15 - Rear window defogger switch
- J... - Engine control module (ECM)
- K10 - Indicator light for heated rear windshield
- L39 - Rear Window Defogger Switch Light
- S224 - Fuse 24 in fuse holder
- S226 - Fuse 26 in fuse holder
- S227 - Fuse 27 in fuse holder
- T6 - 6-Pin Connector, black, in luggage compartment, left (wagon only)
- T6c - 6-Pin Connector, blue, connector station A-pillar, left
- T6h - 6-Pin Connector, black, on rear window defogger switch
- Z1 - Heated rear window
- (41) - Ground connection, below rear shelf
- (81) - Ground connection -1-, in instrument panel wiring harness
- (98) - Ground connection, in rear lid wiring harness
- (A64) - Connector (30, idle boost), in instrument panel wiring harness


--- - wagon only
 * - sedan only

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Windshield wiper motor, Wiper/Washer Intermittent Relay, Motor for rear windshield wiper

- J31 - Wiper/Washer Intermittent Relay
- T6m - 6-Pin Connector, black, connector station A-pillar, right
- T1 - 1-Pin Connector, brown
- T8e - 8-Pin Connector, black, in rear lid, right
- T10c - 10-Pin Connector, violet, connector station A-pillar, left
- V - Windshield Wiper Motor
- V11 - Headlight Washer Pump
- V12 - Motor for rear windshield wiper

- (28) - Ground connection, on firewall
- (30) - Ground connection -1-, beside fuse/relay panel
- (81) - Ground connection -1-, in instrument panel wiring harness
- (98) - Ground connection, in rear lid wiring harness
- (151) - Ground connection -1-, in front wiring harness
- (616) - Ground connection (on luggage compartment light)
- (A49) - wire connection -1-, in instrument panel wiring harness
- (A52) - plus connection 2 (30) (in instrument panel wiring harness)
- (A156) - Sensor Ground Connection (in engine wiring harness)
- - wagon only
- * - models with headlight washer system only

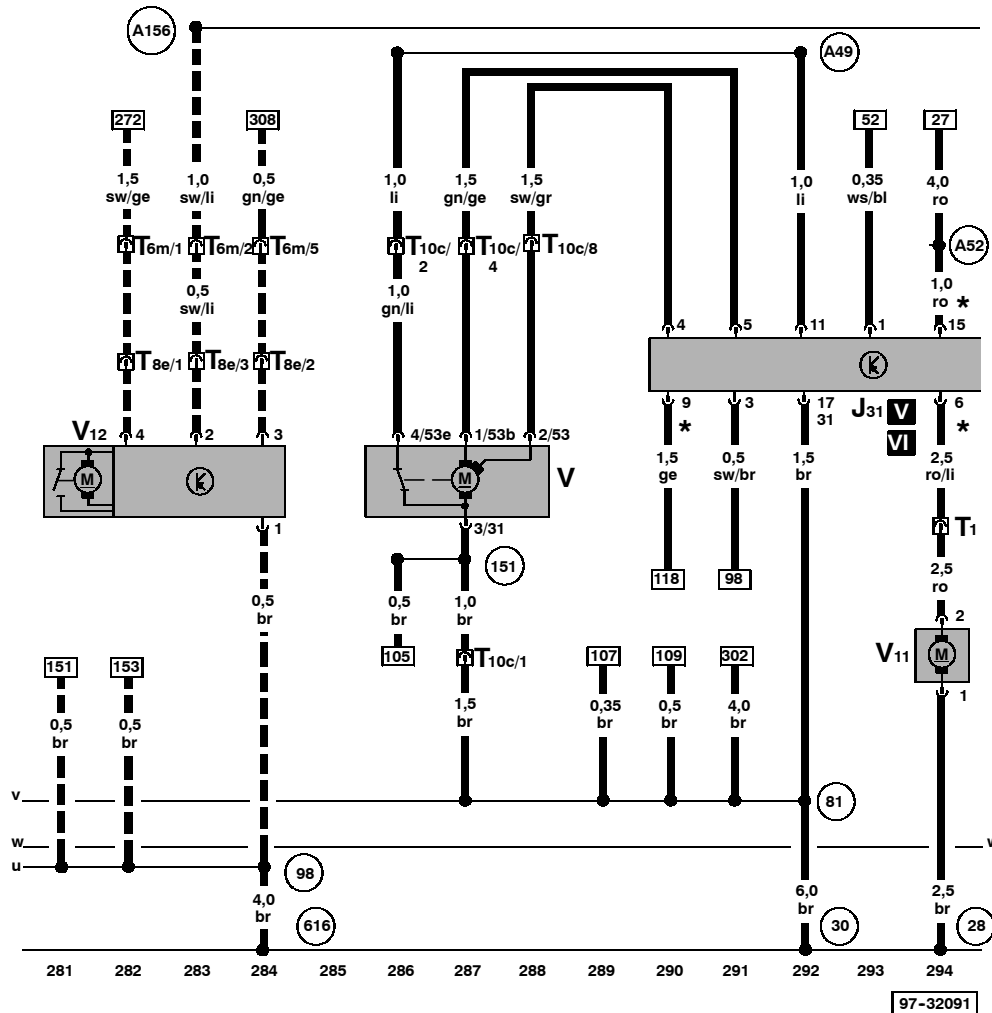


Wiper/washer Intermittent Relay, Windshield Wiper/Washer Switch, Windshield and Rear Window Washer Pump

- E22 - Windshield Wiper/Washer Switch
- J31 - Wiper/Washer Intermittent Relay
- T8b - 8-Pin Connector, on Windshield Wiper/Washer Switch
- T10s - 10-Pin Connector, pink, connector station A-pillar, left
- T10t - 10-Pin Connector, red, connector station A-pillar, left
- V59 - Windshield and Rear Window Washer Pump

- (135) - Ground connection -2-, in instrument panel wiring harness
- (A156) - Sensor Ground Connection (in engine wiring harness)

- - - wagon only
- * sedan only

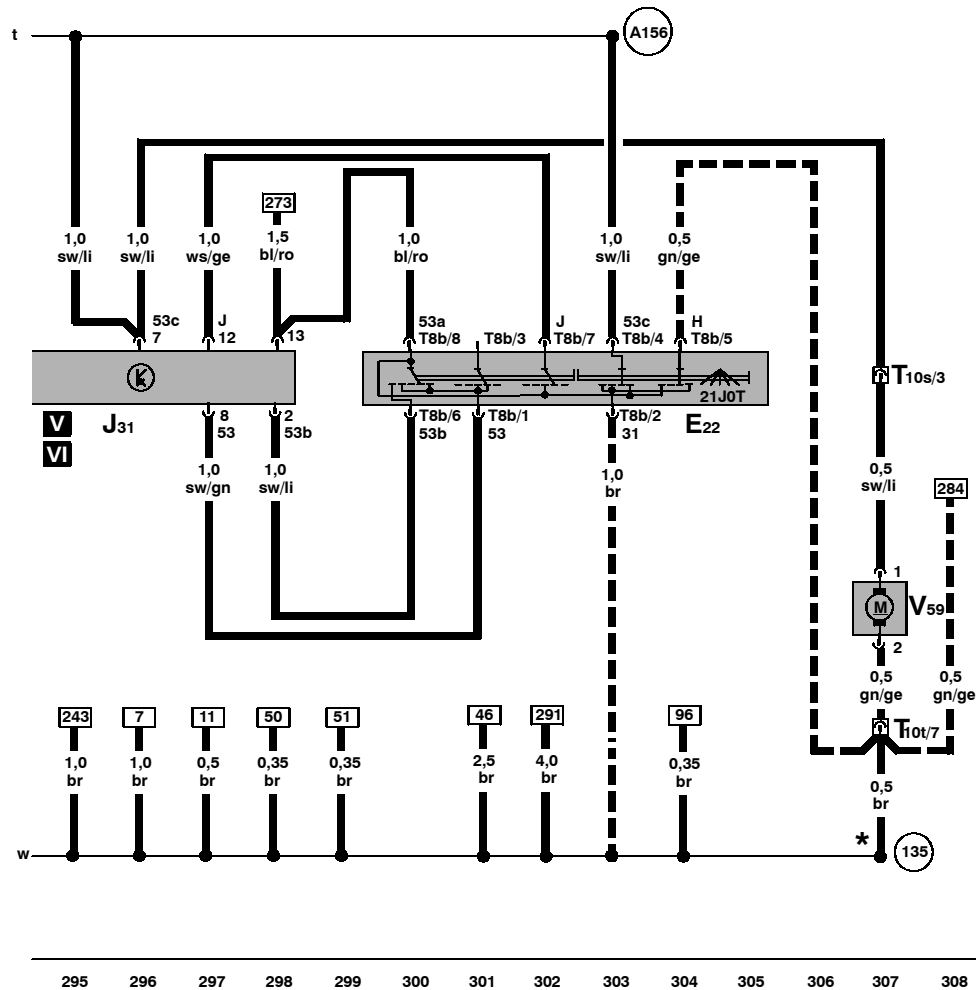

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

295 296 297 298 299 300 301 302 303 304 305 306 307 308

97-35852